
Applying Pesticides Correctly

SEWER LINE CHEMICAL ROOT CONTROL

**WITH EMPHASIS ON FOAMING
METHODS
USING
METAM-SODIUM AND DICHLOBENIL**





SEWER LINE CHEMICAL ROOT CONTROL
WITH EMPHASIS ON FOAMING METHODS
USING METAM-SODIUM AND DICHLOBENIL

PREPARED JOINTLY BY

KEVIN DUKE
Duke's Sales & Service, Inc.
1020 Hiawatha Blvd., West
Syracuse, NY 13204-1131

ERIC JESSEN
Coness Co.
395 Clark Ave
Paonia, CO 81428-1486

Edited by:
Robert V. Bielarski, Ph.D.
Certification, Training and
Occupational Safety Branch
Office of Pesticide Programs
U.S. Environmental Protection Agency

Published September 1995

TABLE OF CONTENTS

CHAPTER 1

PESTS, PESTICIDES AND REGULATIONS	1-1
Pests	1-1
Pesticides	1-2

CHAPTER 2

ROOTS IN SEWERS	2-1
Root Growth	2-1
Non-Chemical Methods of Root Control	2-3
Chemical Methods of Root Controls	2-5
Identifying Which Lines Have Root Problems	2-7

CHAPTER 3

METAM-SODIUM	3-1
Root Treatment Formulation	3-1
Metam-Sodium	3-2
Dichlobenil	3-3

CHAPTER 4

READING THE METAM-SODIUM ROOT CONTROL PESTICIDE LABEL	4-1
The Pesticide Label	4-1
Front Panel - Contents and Warnings	4-1
Other Statements which may not be on the Front Panel	4-3

CHAPTER 5

APPLICATION CONCERNS- WASTEWATER TREATMENT PLANTS LATERAL LINES & BUILDINGS	5-1
Wastewater Treatment Facilities	5-1
Variables in the Wastewater Collection System that Influence Root Control Applications	5-2
Treatment Plants	5-4
Variables in the Wastewater Treatment Facility that Influence Root Control Applications	5-10
Effects of Chemical Root Control on Wastewater Treatment Plant Processes	5-11
Foam Application of Root Killing Chemicals To Building Service Laterals	5-11

CHAPTER 6

SAFE HANDLING OF METAM-SODIUM ROOT CONTROL PRODUCTS	6-14
First Aid and Pesticide Poisoning Recognition	6-15
Protecting Your Body	6-15
<u>Personal Protective Equipment</u>	6-16
Safety Procedures for Personnel Working in Wastewater Systems	6-18
Transporting, Storage, Mixing, Handling Pesticides	6-18

Cleanup of Pesticide Spills 6-21

CHAPTER 7

APPLICATION OF METAM-SODIUM

ROOT CONTROL PRODUCTS 7-1

Application Equipment 7-2

Foaming Techniques for Applying Metam-Sodium

Root Control Chemicals 7-2

Calculating Amount of Chemical Required 7-7

Application Check-List 7-8

Dosage of Product to a Particular System 7-9

Metam-Sodium Root Control Application 7-9

Determining Effectiveness of Root Control Treatments 7-13

GLOSSARY G-1

PREFACE

Sewer line root control is a matter of using the right technologies. To be successful the technology must be effective and must not adversely effect people or the environment.

The purpose of this training manual is to provide a sound foundation for studying the technical aspects of sewer line root control with emphases on the safe use and application of chemical products, especially those which contain, metam-sodium a restricted use pesticide.

Metam-sodium for sewer root control, will be classified for restricted use in 1996. The U. S. Environmental Protection Agency (EPA), which is responsible for registration of pesticide products, mad this decision because of concerns that metam-sodium products used for sewer root control could adversely affect the health of humans, domestic animals and the environment. This action means that metam-sodium root control products may only be purchased by certified pesticide applicators. People desiring certification status must apply to their State pesticide lead agency. The State lead agency will also provide information about the State's pesticide law and specific requirements for certification.

This manual is a valuable source of information for people preparing for certification. Each chapter of this manual covers material considered essential to the proper understanding and implementation of root control involving metam-sodium. Also included is basis information and guidelines to assist the applicator in solving practical problems involving root control with metam-sodium.

INTRODUCTION

Sewer line root control is a matter of using the right technologies. To be successful the technology must be effective and must not adversely affect people or the environment.

The purpose of this training manual is to provide a sound foundation for studying the technical aspects of sewer line root control with emphases on the safe use and application of chemical products, especially those which contain, metam-sodium, a restricted use pesticide.

Metam-sodium, for sewer root control, will be reclassified for restricted use in 1996. The U.S. Environmental Protection Agency (EPA), which is responsible for registration of pesticide products, made this decision because of concerns that metam-sodium products used in sewers for root control could adversely affect the health of humans, domestic animals and the environment. This action means that metam-sodium root control products may only be purchased by certified pesticide applicators and applied only by or under the supervision of such certified applicators. People desiring certification status must apply to their State pesticide lead agency. The State lead agency will also provide information about the State's pesticide law and specific requirements for certification.

This manual is a valuable source of information for people preparing for certification. Each chapter of this manual covers material considered essential to the proper understanding and implementation of root control involving metam-sodium. Also included is basic information and guidelines to assist the applicator in solving practical problems involving root control with metam-sodium.

CHAPTER 1

PESTS, PESTICIDES AND REGULATIONS

Learning Objectives

After you complete your study of this unit you should be able to:

- # Describe what a pest is and name the different types of pests.
- # Explain what a pesticide is.
- # Describe the two general types of certified applicator.
- # Distinguish between a General Use Pesticide and Restricted Use Pesticide.

Pest Management

This chapter is intended to provide the applicator with a general background in the safe use of pesticides. Although this manual focuses on the use of sewer line root control products which contain metam-sodium, as an active ingredient, a knowledge of pesticides, what they are and how to handle them safely, is something all collection system applicators should be aware of. For example, a product that is a "degreaser" may, in its marketing material, claim to kill or control roots. Because of that claim that product is a "pesticide" and is subject to the rules and regulations governing pesticides. All pesticides offered for sale or use in the United States and its territories must be registered with the U.S. Environmental Protection Agency (EPA).

This chapter discusses the differences between "general use" and "restricted use" pesticides. The applicator using either a general or restricted use pesticide must comply with the specific Federal, State, and local rules and regulations that control their safe use and application. A restricted use product such as those root control products containing metam-sodium, require that all applicators be certified or working under the direct supervision of a certified applicator.

By conforming to pesticide regulations the applicator is protecting the customer, the environment, public health and the system that is being treated from potential hazards.

Pests

A pest is anything that:

- # competes with humans, domestic animals, or desirable plants for food, feed or water,
- # injures humans, animals, desirable plants, structures or possessions,
- # spreads disease to humans, domestic animals, wildlife or desirable plants, and
- # annoys humans or domestic animals.

Types of pests include:

- # insects such as roaches, termites, beetles, mosquitoes, fleas and caterpillars,
- # insect-like organisms, such as ticks, spiders and scorpions,
- # mollusks, such as snails, slugs, oysters, clams and shipworms,
- # weeds, which are any plants growing where they are not wanted, such as mosses, algae, dandelions and any plant part such as root intrusions into wastewater collection systems,
- # plant disease pathogens, such as fungi, bacteria and viruses that cause plants to become different from normal plants in appearance or function, and

vertebrates: such as rats, mice, other rodents, birds, reptiles, and fish.

Pesticides

A pesticide may be defined as any substance or mixture of substances intended for preventing, destroying, repelling, or mitigating any pest, and any substance or mixture of substances intended for use as a plant regulator, defoliant, or desiccant. The wise use of pesticides can contribute significantly to the health, welfare and quality of human life. However, improper use of pesticides can be a threat to human health and environmental quality.

Laws and Regulations

Several Laws and regulations affect the sale, distribution and use of pesticides by applicators. Pesticide applicators must be aware of these laws and the penalties that may be imposed for violating them.

FEDERAL INSECTICIDE, FUNGICIDE, AND RODENTICIDE ACT

The Federal Insecticide, Fungicide, and Rodenticide Act (FIFRA) was passed in 1972 and amended several times since. It is frequently called by its acronym FIFRA. The Main parts of the Law that affect the pesticide applicator are:

- # All pesticide products must be classified as either general or restricted use.
- # An applicator must be certified as competent to use or supervise the use of any restricted use pesticide.
- # It establishes two general categories of certified applicator, private applicator and commercial applicator.
- # All pesticide must be applied according to label directions.
- # It provides penalties (fines and jail terms) for violations of FIFRA.
- # It provides states the authority to regulate the sale or use of any federally registered pesticide in their state.

The U.S. Environmental Protection Agency (EPA) was authorized to promulgate regulations to carry out the provisions of FIFRA. By regulation, the EPA set minimum standards of competency for certification of pesticide applicators. This regulation, 40 CFR 171 "Certification of Pesticide Applicators", allows States and Indian Tribes with EPA approved plans to administer certification programs within their states.

Certification of Pesticide Applicators. Certification is proof that an applicator knows the correct and safe way to apply restricted use pesticides. Both private and commercial applicators have to be certified to apply or supervise the application of restricted use pesticides.

Private applicator. An applicator who uses or supervises the use of any restricted use pesticide for the purpose of producing any agricultural commodity on property owned or rented by the applicator or his employer.

Commercial applicator. An applicator who uses or supervises the use of any restricted use pesticide for any purpose or on any property other than as provided under the private applicator definition. A state may have several different categories of commercial applicator.

State Certification. Each state designates a pesticide lead agency to administer its certification program. Applicators seeking certification must contact the State Lead Agency (SLA) for instructions. Applicators should note that many states require commercial pest control firms that apply pesticides to be licensed by the SLA. Generally, these states require that licensed firms also have certified applicators on staff and that all pesticides, regardless of classification, be applied by or under the supervision of a certified applicator.

Classification of Pesticides. Manufacturers must register every pesticide with the EPA. By statute, all uses must be classified by EPA either as general or restricted use.

General use pesticide. A pesticide that is not likely to harm humans or the environment when used according to its label directions is classified for general use.

Restricted use pesticide. A pesticide that has more potential for harming humans or the environment than a general use pesticide and require a degree of knowledge to assure correct application. Restricted use pesticides may only be applied by or under the direct supervision of a certified applicator.

Label Directions. An applicator may not use any pesticide in a manner not permitted by the product's label. A pesticide may be applied only on the plants, animals, or sites specified in the directions for use. You may not use higher dosages, higher concentrations, or more frequent application. You must follow directions for use, safety, mixing, diluting, storage, and disposal, as well as any restrictions.

Penalties. Any commercial applicator who violates any provision of FIFRA may be assessed a penalty of not more than \$5,000 for each offense (\$1,000 for private applicators). Before the Agency imposes a fine, you have the right to ask for a hearing in your own city, county or parish. Any applicator who knowingly violates any provision of FIFRA shall be fined not more than \$50,000 or one year in prison (\$1,000 and/or 30 days in prison) for private applicators. Additional penalties may be levied under the respective state laws.

Other Regulations. In addition to FIFRA and State Pesticide laws the certified applicator should be knowledgeable concerning a number of other regulations such as those listed below:

Endangered Species Act. A Federal law designed to protect plant and animal species, that are in danger of extinction. The EPA in cooperation with other Federal, State and County agencies have established limitations on the use of certain pesticide in specific areas known to harbor endangered species. Prior to making any pesticide application the user must determine that endangered species are not located on or immediately adjacent to the site to be treated. If in doubt the user should contact the regional U.S. Fish and Wildlife Service Office, or the State Fish and Game Office. Please Note: Sewers may not be devoid of endangered species. It is reported that the endangered Gray Myotis bat is present in the city sewers in Pittsburg, Kansas.

Hazard Communication Standard (HCS). A regulation under the Occupational Safety and Health Act (OSHA) that requires employers to provide protections to workers who may be exposed to hazardous chemicals under normal operating conditions or in emergencies. The regulation requires employers to:

- # make a list of hazardous chemicals in the workplace,
- # obtain material safety data sheets (MSDS) for all hazardous substances on their list,
- # ensure that all containers of hazardous materials are labeled at all times,
- # train all workers about hazardous materials in their workplace, and
- # keep a file (including the MSDSs) on the hazardous chemicals and make it available to workers.

The Occupational Safety and Health Act (OSHA). Employers must keep records of all work-related deaths, injuries, and illnesses and make periodic reports.

Test Your Knowledge

Q. When may tree roots be considered a pest?

A. When they become pests when they affect humans' property and well being especially when they invade and damage sewer pipes in search of food and water.

Q. Name several different types of pests.

A. Some insects, other invertebrate organisms such as spiders and ticks, plant diseases, weeds, and vertebrates such as mice and rats.

Q. What is a pesticide?

A. A pesticide is any substance or mixture of substances intended to prevent, destroy, repel or mitigate any pest, or for use as a plant regulator defoliant or desiccant.

Q. Distinguish between a General Use Pesticide and Restricted Use Pesticide.

A. A restricted use pesticide has more potential for harming humans and the environment than a general use pesticide and may only be applied by or under the direct supervision of a certified applicator.

Q. An applicator that applies or supervises the application of a restricted use pesticide in any area for a fee is called:

A. a commercial applicator.

CHAPTER 2

ROOTS IN SEWERS

Learning Objectives

After you complete your study of this unit you should be able to:

- # Determine the two different types of root systems and which is associated with sewer problems.
- # Be familiar with factors around sewer pipes that influence root growth.
- # Identify the two types of root structures in sewer lines.
- # Describe at least three non-chemical methods of root control.
- # Name at least four different chemical control methods other than metam-sodium.
- # Explain the differences between contact and systemic herbicides and between selective and non-selective herbicides.
- # Describe three methods used to identify which lines have root problems.

Root Related Sewer Problems

The intrusion of roots into sewers is probably the most destructive problem encountered in a wastewater collection system."

Root related sewer problems include:

- # sewer stoppages and overflows,
- # structural damage caused by growing roots,
- # formation of septic pools behind root masses which generate hydrogen sulfide, other gases and odors,
- # reduction in hydraulic capacity, and loss of self-scouring velocities.
- # infiltration where the pipe is seasonally under the water table.

Sewer stoppages and overflows are the way that most municipalities and homeowners find out about their root problems. Structural damage on the other hand usually goes unnoticed until the damage is determined through television probing. In the long run, structural damage is probably more costly than sewer stoppages.

Sewers are underground, so root problems are not noticed until backups or overflows occurs. Effective use of early, preventive root control, can avoid costly and permanent structural damage. However, municipalities are unlikely to fund a preventive root control program until a known problem alerts officials to the need for control.

Root Growth

Roots have three basic functions: 1) they anchor the plant and hold it upright, 2) they store food for the plant, 3) and they absorb and conduct water and nutrients.

Roots are tenacious and long-lived. The top of a plant is more dependent on the root system for survival than vice-versa. A plant can regenerate after it has been topped but cannot survive the loss of its root system. A willow tree root system can survive for many years after the top has been removed and will continually try sending up new shoots through the stump or exposed roots. The root systems of some grasses of the American Great Plains are thought to have remained alive for thousands of years. Just how far roots will grow in search of moisture and nutrients is uncertain. In the Rocky Mountains in Colorado, live tree roots have been found penetrating a pipe in the Moffet tunnel, 2500 feet from the nearest tree.

Root Systems. Plants may have either a fibrous root system or tap root system. Plants with **fibrous root systems**, such as garden plants and grasses occupy the upper layers of soil and extend outward are not normally associated with sewer problems.

Plants with tap root systems are the trees and woody plants. The primary root of the plant grows directly downward into the soil. Tap root systems are well adapted to deep soils and soils where the water table is relatively low. Branches, or secondary roots, grow laterally from the primary root. Secondary root structures can grow several inches in diameter, and if they invade sewer pipes can exert enough pressure to spread pipe joints and break pipe.

Feeder roots are fine, hairlike roots that may develop into secondary roots. The surface of feeder roots contain microscopic structures called root hairs. Root hairs greatly increase the total surface area available to absorb nutrients and water.

The leading tip of a root shoot, the **meristem**, "senses" minute differences in nutrient and moisture levels and grows toward them. The ability to detect these differences enables the root to locate a sewer pipe. Temperature variance between wastewater flow within a pipe and surrounding soil may cause condensation to form on the pipe. Also, loose pipe joints, cracks and pipe porosity, allow water with a high nutrient content water to seep from the pipe into the surrounding soil. This type of environment attracts and encourages root growth.

Factors Affecting Root Growth. A number of different soil conditions, around sewer lines, influence root growth. Back fill used during sewer construction may provide more favorable soil than undisturbed soils. Water table levels will fluctuate with seasonal changes. During drier seasons the water table drops and tree roots will grow deeper in search of moisture. The tendency of roots to grow towards moisture is called hydrotropism. Sewer lines above the water table will draw roots in that direction. During colder seasons especially where ground frost occurs, the warmer soil temperatures surrounding the sewer pipe may also cause the roots to grow in that direction. Moisture and warm temperatures surrounding a sewer pipe create an excellent environment for root growth. If the moisture level drops below a certain point roots will begin to wilt.

Microscopic openings only a few cells wide permit hair-like structures to penetrate pipe joints, cracks, connections, or any other opening. Heavy secondary root structures may follow a sewer pipe for many feet, exploiting each opportunity to penetrate pipe joints.

Roots thrive in sewer pipes, a perfect hydroponic environment. Roots are suspended in a well-ventilated, oxygen rich environment with a plentiful supply of water and nutrients.

Generally, root growth is greatest in fall, winter, and spring before leafing. At this time roots are either storing or distributing nutrients. Root growth is less active in the late spring and summer season when the above ground portion of the tree is growing. Little is known about the growth rate of tree roots.

Roots of most trees cannot grow or survive if constantly submerged. Therefore roots generally do not cause problems in sewers that are located below a permanent water table. With adequate water available roots need not expend energy trying to penetrate the water table and sewer pipes. However, if the water table fluctuates, or if porous soil profiles permit rapid downward movement of rain water, roots can be found in saturated soil and can be a major cause of sewer infiltration. In this case, tree roots suspended in the atmosphere of the sewer can carry on metabolic activity while the woody, submerged portion of the root system serves as a pipeline for plant nutrients.

Roots must always grow because parts of the root system are constantly dying. If a root system stopped growing, the plant would die. When the nutrients or moisture in an area of soil is depleted, feeder roots

die. Secondary roots elongate or stop growing, depending on the availability of additional nutrients. In time bacteria in the soil break down the dead root tissue, helping to replenish the depleted nutrients.

Roots in the Sewer Environment.

In urban environments, finding good sources of nutrient for tree roots may be difficult. Expanses of concrete and asphalt, removal of leaves and other organic debris from lawns and storm sewers draining away surface water cause roots to seek nutrition at greater depths. Some roots may follow building sewers well beyond the tree's drip line to the main line sewer.

Two types of root structures found in sewer lines are known as veil and trail. The **veil root structure** occurs in lines with steady flows, such as interceptor pipe and other lines with constant flow. The roots will penetrate pipe at the top or sides and hang from upper surface, like a curtain, touching the flow. Live roots are seldom found below the water line. The roots will rake the flow accumulating solids and debris. Grease and other organic materials will also accumulate. Eventually the root mass and accumulated materia will cause a stoppage of flow, and gasses may develop.

The **tail root structure** occurs in sewers that have very low or intermittent flow, such as in small diameter collector sewers, building sewers, and storm drains. The tail root structure looks like a horse's tail. The roots will grow into the pipe from the top, bottom, or sides, and continue to grow downstream filling the pipe. Tail root structures over 20 feet long have been removed from sewers. Such root structures may appear as solid tubes of tree root, possibly with a slightly flattened area along the bottom where submergence in sewer flows prevent would prevent root growth.

Roots that enter the sewers or are visible during a television inspection represent only a small percentage of total root structures in the vicinity of the sewer. Roots girdling the pipe on the outside are responsible for pipe damage as they swell inside joints and cracks.

Non-Chemical Methods of Root Control

Chemical, as well as several non-chemical methods of sewer line root control are available to the root control expert and the public works officials. Although non-chemical methods generally do not provide the same level of results as chemical methods they have an important place in sewer maintenance. For example, mechanical methods are best for opening plugged sewers and for removing roots from sewers that are at imminent risk of plugging. In some cases chemical control methods should not be used especially, when near treatment plants of due to other environmental or safety considerations. Pipe relining, grouting and sealing may also deter intrusion by roots. Municipal planners may discourage future root problems by discriminate selection and planting of trees in the proximity of proposed sewer lines. A successful line root control program will integrate a variety of root control methods namely: cultural, physical, mechanical, and chemical .

Cultural Control. Cultural control of roots in sewers are routine management practices that can prevent tree roots from invading sewer lines. Cultural control must be implemented before roots have a chance to become a problem. Two major cultural methods are: 1) careful installation and inspection of sewer lines during construction, and 2) control of the selection of tree species and planting sites. Sewer connections with air-tight joints, seams, will make it difficult for roots to penetrate. Municipalities should carefully inspect connections where plumbers join building laterals to the main-line sewer. Also, homeowners should be advised of the potential for future root problems and should be discouraged from planting deep rooted or fast growing trees near sewer lines. Willow trees, in particular, have adventurous and thirsty roots. Unfortunately, when a sewer root problem is detected, it is too late for cultural control.

Physical Control. Physical pest control relies on devices or procedures which physically separate and/or the pest from the target area. A mosquito net is a physical pest control method. Physical control of sewer

line roots, involves isolating the environment of the sewer pipe from the roots around or near the sewer pipe. Three examples of physical control are: 1) tree removal, 2) pipe replacement, and 3) pipe re-lining.

Tree removal. This method works best when removing a single troublesome tree such as a willow whose roots have invaded pipes. Unfortunately it would be difficult to convince homeowners along "Shady Lane" that the municipality's public works department should remove their trees in the vicinity of sewer lines. This would not only be expensive but would not guarantee removal of the root problems. Roots may survive long after the death of the above ground part of the tree necessitating the use of mechanical or chemical controls for some time afterward. For tree removal to be most effective, the stump should be pulled or chemically treated with a basal application herbicide.

Pipe replacement involves removing old, defective sewers and replacing them with new sewers. As discussed above, the new sewers must have air-tight joints and properly installed connections in order to prevent the roots from becoming a problem. Pipe replacement corrects structural defects as well as root problems. There are four major disadvantages to pipe replacement: 1) cost, 2) disruption of traffic and property, 3) roots can still enter through building sewers, and 4) the destruction of trees planted in the vicinity of the trench line. If the pipe is in danger of collapsing, or is in a state of structural failure, pipe replacement may be the best method of control. Pipe replacement is not warranted when the pipe is in sound structural condition.

Pipe lining includes various technologies for rehabilitating sewer pipe. Roots must be chemically or mechanically removed prior to installation. One method, "Slip-lining" involves pulling a seamless pipe through the existing sewer and digging only where building laterals require connecting. Another method, "Cured-In-Place" lining involves inflating and curing a sock or plastic tube that conforms to the shape of the pipe. Robotic devices are then used to cut building connections into the liner.

Advantages of pipe lining are that it 1) addresses infiltration problems and some structural defects, 2) is less disruptive than pipe replacement, and 3) promises long-term control against root regrowth through joints. Disadvantages of pipe lining are: 1) it is often more costly than replacement, and 2) roots can still re-enter the main-line sewer through building laterals. Even after relining the main-line sewer, chemical control may be required to prevent roots from penetrating the main-line sewer through service connections.

Mechanical Control. Mechanical control is the most common method of root control, and the most important non-chemical method for applicators to understand. Mechanical control involves the use of tools or other devices which cut and remove roots from sewers.

Drill machines, also called coil rodders, are either hand or power-driven, spring-like, flexible steel cables which turn augers or blades within the sewer. They are most often used by plumbers to relieve blockages in house-lines or other small diameter sewers. They are seldom used in main-line sewers.

Rodding machines are flexible steel rods with an attached rotating blade cutters, augers, or corkscrews. Rodding machines are most effective in small diameter sewers, up to 12".

Jettors are also known as flushers, flush trucks, jet rodders, jet trucks, and hydraulic sewer cleaners. Jettors consist of a high pressure water pump, water tank, hose reel, and 1/2" to 1" sewer cleaning hose. Orifices in the rear of the nozzle propel the hose through the sewer. The nozzle blasts through obstructions. As the hose and nozzle is retrieved, debris is hydraulically flushed back to the insertion manhole for removal. Jettors can also be equipped with root cutters which use the force of water to spin blades. Unfortunately, root cutters can easily get stuck in the sewer, especially where there are protruding taps or other structural defects. Bound cutters can only be removed by digging them out.

Winches, also called drag machines or bucket machines are large, engine-driven winches which pull buckets, brushes, or porcupine-like scrapers through the sewer. Special tools are designed to cut

roots. Winches are most often used on large diameter sewers which cannot be cleaned efficiently with jetters. Winches are used in heavy cleaning to remove large volumes of solids.

The main advantage of mechanical control is that it is the only method of relieving a root blockage. Chemicals are ineffective and dangerous when used in plugged or surcharging sewers. Sewer stoppage is an emergency situation and the municipality should have some type of mechanical control device for correcting such problems.

The main disadvantage of mechanical control is that it provides no residual control or long-term effectiveness. Roots respond to injury by producing a hormone, abscisic acid, which hastens and thickens regrowth. Root masses grow back heavier each time they are cut. Tap roots continue to grow in diameter and in time place additional stress on sewer pipe. Good results are obtained if the roots are cut flush with the joints however offset joints and cut-in laterals can prevent the use of full-gauge cleaning tools.

Mechanical control is often used in conjunction with chemical control. For example, to prepare sewer lines for rehabilitation with pipe-lining and grouting.

Chemical Methods of Root Controls

Chemicals can kill roots for a distance beyond the point of contact, providing control of root growths outside the sewer pipe.

Pesticides are the fastest way to control pests. For root control they are practically the only tool available. Choosing the best chemical for the job is important. Chemicals used to control weeds are called herbicides. They kill plants by contact or systemic action. A **contact herbicide** has a localized effect and kills only the plant parts which the chemical comes in contact with. **Systemic herbicides** are absorbed by roots or foliage and carried throughout the plant. Contact herbicides result in quick die-back. Systemics take longer, two weeks or more, to provide the desired results. Metam-sodium is a contact herbicide.

Herbicide activity is either selective or non selective. **Selective herbicides** kill weeds certain types of weeds such as broadleaf or grassy plants. They are used to reduce unwanted weed without harming desirable plants. **Non selective herbicides** kill all plants present if applied at an adequate rate. They are used where no plant growth is wanted. Metam-sodium is a non selective herbicide.

Many chemicals such as bensulide, dichlobenil, dinoseb, endothall, metham, paraquat, trifluralin, 2, 4-D, 2, 4, 5-T, copper sulfate, and chlorthiamid have been tried for root control. Note: not all of these products may be registered in all states, or there may be special handling requirements not specified on the label. Applicators should check with local authorities before using these pesticides. Also, acid and basic compounds such as sulfamic or sulfuric acid and sodium or potassium hydroxide are commonly used as "pour down" products in residential settings.

Trifluralin. Brand Names: Treflan, Bio-Barrier.

Fabric or rubber impregnated with trifluralin pellets is a relatively new concept in sewer line root control. The impregnated fabric is placed between the sewer pipe and trees at the time of sewer installation. The fabric is porous allowing water to pass through. The trifluralin pellets are time-released, with manufacturer's claims that active ingredient leaches only a few inches before being trapped by soil particles. Impregnated rubber is used for joint gaskets. Trifluralin is not water soluble, and unsubstantiated claims state that root control lasts for "decades".

Three advantages of this method are: 1) root control is long-lasting without need for re-treatments, and 2) pesticides are not directly introduced into the sewer collection system, 3) environmental risk is minimized.

The main disadvantage of this method is: installation is well in advance of roots actually becoming a problem. This method cannot be employed economically after a problem occurs.

Actually, modern pipeline installation, if done correctly, can adequately deter root penetration making preventive chemical control unnecessary.

Copper Products. Synonyms: Copper Sulfate, Bluestone. Numerous brand names

Although small amounts of copper are required by plants for normal growth, excessive amounts of copper will cause leaf damage and could result in the death of the tree. Copper is a heavy metal which may not be removed by the normal treatment process. Not only can it be toxic to the treatment plant's microbes but it leaves the treatment plant as a pollutant in both the effluent and the biomass (sludge), thus becoming a potential environmental contamination.

Copper Sulfate has been used for many years for root control in sewers and as an algicide. Some studies have shown that high concentrations of copper sulfate cause systemic injury without completely killing the roots. Nevertheless, copper sulfate products are still in widespread use by many plumbers and homeowners as a "pour down" application for controlling roots in building sewers. Copper sulfate is believed to be a relatively safe material to handle, and poses little health risk to the applicator.

The use of copper products may not be permitted in some states. Check with local authorities before use.

Metam-Sodium and Dichlobenil. Synonyms: Metam, Metam-Sodium, Metham-Sodium, Vapam®; Synonyms - Dichlobenil: Casaron®

Metam-sodium and dichlobenil have been used together as a root control product in sewers for approximately 25 years. Metam-sodium is a fumigant, meaning it breaks down into a gas, methylisothiocyanate (MITC), which kills the plant roots. It is non-systemic and does not move throughout the root system killing the whole plant. Metam is used with dichlobenil because as dichlobenil is an effective growth inhibitor.

These two pesticides were originally applied together by spray or soak methods. Soaking entailed plugging the pipe, filling it with the chemical for a period of time, allowing the chemicals to penetrate any blockages as well as soaking out cracks and joints and killing further up the root system. Spraying involved spraying the interior of the pipe with the chemical solution. Because of the large doses of chemical used and their apparent threat to treatment facilities the soak or spray or are no longer recommended.

Current methodology uses metam-sodium products as a dry foam (similar to shaving cream). Specialized foam generating equipment is used to produce the foam which is then applied to the interior of the pipe. Application is made through a hose which is inserted to the length of pipe to be treated. While the hose is being retracted foam is pumped through the end filling the pipe with foam. As the foam collapses (over a period of 1 hour or more) it has a tendency to adhere to the pipe and root surfaces.

Any product that does not adhere to the roots and pipe walls enters the wastewater in the pipe and is carried to the treatment facility. The dilution of the product in the wastewater, and the instability or rapid breakdown (fuming off) of the metam-sodium, allows a safety margin for the treatment plant.

Once the roots have been killed (within hours of application), bacteria and other microbes in the sewer begin to breakdown the dead tissue. Total decomposition of the roots may take several months to a year or more. The decomposed organic matter enters the wastewater stream and is carried to the treatment plant for disposal. Root regrowth will start in a couple of years which may necessitate retreatment at 3 to 5 year intervals.

Identifying Which Lines Have Root Problems

Pest identification is usually the first and most important step in a pesticide control program. In sewer line chemical root control, pest identification is not a issue because it does not matter which species of tree is producing the nuisance roots. All roots in sewers are pests -there are no beneficial species.

In sewer line chemical root control, the sewer applicator is, confronted with the problem of determining which sewer lines have been infiltrated by roots. Several indicators are available for determining which collection lines have root penetration:

Maintenance histories. Maintenance records will indicate sewer lines which have experienced a stoppage and the cause of stoppage.

Sewer line television reports. These provide accurate evidence of a root problem.

Commonalties in root prone areas. Generally, sewer lines in the same area, that were installed at the same time with similar tree-planting patterns near sewers, will experience similar root problems.

Conditions which increase the likelihood of root problems in a particular sewer section are:

- # Sewers located near other sewers with known root problems.
- # Sewer pipes located near the surface and closer to tree roots.
- # Sewer-lines located off-road in wooded easements, or at a curb line, near trees and roots.
- # Sewer-lines with many lateral connections per lineal foot, affording greater opportunity for root intrusion.
- # Sewer-lines located in tree-lined streets and easements.
- # Residential areas are more susceptible than industrial areas.
- # Sewer pipe constructed with loose fitting joints or out-dated joint packing material. (Asbestos-cement pipe, orangeburg pipe, and clay tile sewers with oakum joints are very susceptible to root penetration whereas pipe with air-tight rubber gaskets and seamless pipe are less susceptible).

A useful tool for planning root control programs is the scattergram. This is a map of the sewer collection system with known root problem lines highlighted. As a root-related stoppage occurs, or if other evidence of a root problem is detected, the line is highlighted on the map. Over time, patterns begin emerging indicating an area is root prone.

Test Your Knowledge

Q. Name the two types of root systems associated with sewer problems.
A. Fibrous root systems and tap root systems.

Q. Name at least three factors around sewer pipes that influence root growth.

- A. Backfill soil around the pipe is more attractive than compacted soil, roots are hydrotropic and seek moisture, a dropping water table attracts roots deeper, warmer temperatures around the pipe are more attractive than colder surface temperatures.
- Q. Describe the two types of root structures found in sewer lines.
- A. Veil root structures hang from pipe with steady flows, and sweep the tops of the flow or nutrient. Tail root structures grow pipe with low or intermittent flow and look like a horse's tail growing downstream.
- Q. Name at three different non-chemical root control methods.
- A. Cultural control, physical control and mechanical control.
- Q. Name at least three chemical control methods other than metam-sodium.
- A. Use of herbicides, acid or basic compounds, copper products and trifluralin impregnated fabric.
- Q. Explain differences between contact and systemic herbicides and between selective and non-selective herbicides.
- A. Contact herbicides quickly kill only that part of the plant it contacts whereas systemic herbicides are slowly transported throughout the plant and killing it. Selective herbicides will affect one type of plant such as broadleaves or grasses whereas non-selective herbicides affect all plants.
- Q. Name several methods used to identify which lines have root problems.
- A. Maintenance histories (scattergram), sewer line television reports and commonalities in root prone areas.

CHAPTER 3

METAM-SODIUM

Learning Objectives

After you complete your study of this unit you should be able to:

- ! Explain what a pesticide formulation is.
- ! Describe the formulations used with metam-sodium root control products.
- ! Describe what happens to metam-sodium in the presence of water.
- ! Explain why dichlobenil is used in combination with metam-sodium.

Root Treatment Formulation

The **active ingredients** in a pesticide are the chemicals that control the target pest. The pesticide product the sewer applicator purchases is rarely made up only of active ingredients. Usually the pesticide is dissolved in a carrier, such as water, or in the case of wettable powders, clay is added as a carrier, with other chemicals added before the product is offered for sale. Carriers, solvents and additives inert ingredients (**inerts**), and may include wetting and/or foaming agents, spreaders, stickers, extenders, or diluents. They usually make the product safer, easier to apply, more convenient to handle, and more accurate to measure. This mixture of active and inert ingredients is called a **pesticide formulation**. Some formulations are ready for use. Others must be diluted with water, a petroleum solvent, or air, by the user, before they are applied.

Types of Formulations

A single active ingredient often is sold in several different kinds of formulations. Normally for other pest control programs applicators must consider factors such as pests, application equipment, hazards, safety and the environment in deciding which formulation to use.

In the waste water industry these choices have been much simplified since the target pest (tree roots) are confined to the interior of a pipe or structure.

Liquid Formulations.

Foams. Except for sewer line root control use of foam has been limited in the pesticide industry. For sewer-line root control, foams are an important method for delivering pesticides to the site of the pest (root intrusion). At the present, metam-sodium products for sewer usage may only be applied as a foam. Foam quality may vary and is difficult to define. For instance, foam may have the consistency of an aerosol shaving cream (dense, small dry bubbles) or that of dish washing soap suds (fluffy, large watery bubbles). For sewer use, the desired foam is that of an aerosol shaving cream. The dryer phase of this foam is used to treat smaller pipe (less than 12" - 14" diameter) and a wetter foam is used to treat larger pipe (14"+ diameter).

Specially designed foam generating equipment is required to produce and deliver the foam to the interior of the pipe. The industry standard (dry foam) is to generate 20 gallons of foam from 1 gallon of chemical-water solution, and for the wetter foam, to generate 14 gallons of foam from 1 gallon of chemical/water solution.

Foam is used to deliver root control chemicals because:

- # it effectively fills the pipe void above the flow line, contacting the pipe walls and root masses,
- ! it does not break down for a period of time after application, maintaining the required contact time for metam-sodium,

- ! it prevents metam vapor from drifting through the pipe into manholes and house vents,
- ! it contains surfactants and emulsifiers which assist the herbicides in penetrating through the grease and organic deposits, on the root masses, increasing the effectiveness of metam-sodium, and
- ! it allows treatment while pipes remain in service.

Dry Formulation

Wettable Powders (WP). Wettable powders are dry, finely ground formulations which look like dusts. They must be mixed with water for application. Dichlobenil as used in sewer line root control falls into this classification.

Metam-Sodium

Metam-sodium (sodium-N-methyldithiocarbamate), is also known as Vapam®¹, Metham sodium and SMDC. Metam-sodium is a fumigant pesticide with end use products formulated as 18% to 42% aqueous solutions. This chemical has been registered since 1954 for use as a preplant fumigant to control weeds, nematodes, fungi, bacteria and insects. There are approximately 35 registered metam-sodium products. Additional uses include wood preservation, slimicide, tree root control and aquatic weed control. Metam-sodium has been used commercially in combination with dichlobenil for sewer root control since the early 1970's.

Reactivity. Metam-sodium is stable under normal conditions and very stable at a pH higher than 8.8. The commercial metam-sodium formulation is stable at a buffered pH of about 10. Metam-sodium is unstable at a pH below 7 at which point it hydrolyzes (breaks down into other products). Prolonged exposure to air results in gradual decomposition to form MITC, a poisonous gas. When metam-sodium is mixed with water it rapidly hydrolyzes to MITC. The MITC gas penetrates the root mass to kill the roots. MITC is much more toxic than its precursor metam-sodium. MITC may reach unsafe levels in poorly ventilated or confined spaces. Use of air-supplied respirators would be required under such conditions.

During normal conditions of use metam-sodium is diluted with water with air added to form a foam. Dilution with water decreases the solution's pH causing rapid hydrolysis of the metam-sodium. In addition to MITC hydrolysis also yields carbon disulfide (CS₂), hydrogen sulfide (H₂S) and minor products, elemental sulfur and 1,3-dimethylthiourea. In confined space these byproducts could exacerbate hydrogen sulfide problems in collection systems or compromise pre-treatment local discharge limitations.

Inhalation Exposure. exposure to Metam-sodium by inhalation is assumed to be slight. However, since metam-sodium decomposes to MITC, CS₂, H₂S and other products. MITC is a gas that is extremely irritating to respiratory mucous membranes, to the eyes, and to the lungs. Inhalation of MITC may cause pulmonary edema (severe respiratory distress, coughing of bloody, frothy sputum). For this reason metam-sodium must be used outdoors only, and precautions must be taken to avoid inhalation of evolved gas by wearing an approved canister respirator or air supplied respirator. If pulmonary irritation or edema occur as a result of inhaling MITC, transport the victim promptly to a medical facility.

Dermal Exposure. Exposure to metam-sodium through the skin is expected to be minimal if adequate personal protection equipment (PPE) is worn, namely chemical resistant gloves, long sleeved shirt and goggles. Since the surface of the skin is acidic, pH 4.5 - 6, metam-sodium will decompose upon contact with the skin. MITC is extremely irritating to the skin and eyes. Contamination of the skin should be treated

1

Vapam is a registered trademark of Zeneca Agricultural Products.

immediately with copious amounts of water to avoid burns and corneal injury. If skin or eye irritation persists, seek medical attention.

Developmental Effects. Studies with laboratory animals indicate that metam-sodium ingested over a period of several days can cause pregnant females to lose weight and fetuses and offspring to exhibit skeletal irregularities.

Dichlobenil

Dichlobenil is a residual-type pesticide formulated as a wettable powder, soluble concentrate/liquid, and granules. The chemical has been registered since 1964 as a soil sterilant to control broadleaf weeds, grasses and aquatic weeds. Dichlobenil is also applied as a foam, spray or additive to chemical grouts for the control of tree roots in sewer-lines. For sewer use it is formulated as a 50% or 85% wettable powder and is frequently used in combination with metam-sodium.

Dichlobenil kills weeds by impairing metabolic processes that are unique to plant life. For this reason it's mammalian toxicity is low. Nonetheless care should be exercised when handling this and any pesticide especially when used in combination with other pesticides such a metam-sodium. Consult the product's label and material safety data sheet (MSDS) for precautionary instructions.

Test Your Knowledge

Q. What is a pesticide formulation?

A. A formulation is a mixture if active ingredients (control material) and inert ingredients (carriers and other agents such as foam).

Q. Describe the formulations used with metam-sodium root control products.

A. Metam-sodium is a liquid formulation that include a foaming agent or require a foaming agent to be added prior to dispersal. Dichlobenil is a wettable powder that may be added to the metam-sodium foam mixture.

Q. Describe what happens to metam-sodium in the presence of water.

A. Metam-sodium mixed with water will hydrolyze to form MITC, H₂S, CS₂ and other minor products.

Q. How can hydrolysis of metam-sodium affect an applicator.

A. MITC, a product of hydrolysis, is a highly toxic gas.

Q. Why is dichlobenil added to metam-sodium as a root control pesticide.

A. Metam-sodium is a contact herbicide, killing only those root parts it contacts. Dichlobenil is a residual type herbicide that continues to control root growth for a period after application.

CHAPTER 4

READING THE METAM-SODIUM ROOT CONTROL PESTICIDE LABEL

Learning Objectives

After you complete your study of this unit you should be able to:

- # Interpret the terms of a label.
- # Describe how metam-sodium and dichlobenil are packaged and labeled.
- # Explain the differences between Brand, chemical and common names.
- # Interpret the signal words and symbols on a pesticide label.
- # Know the types of hazard precautionary statements on the pesticide label.

The Pesticide Label

The pesticide **label** is the information attached to the pesticide container. **Labeling** includes the label plus all other information you receive from the manufacturer about the product. FIFRA requires that specific information be printed on the container labels of registered pesticides. This provision is made for the protection of humans, animals, plants, and the environment. Some labels are easy to understand. Others are complicated. But all labels will tell you how to use the product correctly. This chapter will explain the items that must be on a label.

Root control products containing metam-sodium are packaged separately. These products are meant to be mixed together in the field as two active ingredients, metam-sodium and dichlobenil. Dichlobenil is formulated separately. In some cases, manufacturers also package the wetting/foaming agent separate from the metam-sodium. Thus the user will find a product label on each of the separately packaged containers that describes the ingredients contained in that container. The overall package label lists all the ingredients contained in the complete package. Note: these labels each contain a statement "Only for use as a combination of metam-sodium, dichlobenil and foaming agent as directed".

Front Panel - Contents and Warnings

FIFRA requires that certain statements appear at specific locations on a pesticide label. Refer to Figure 1 at the end of this chapter for the locations of required statements on a metam-sodium root control product.

1. **Classification Statements**

A statement "Restricted Use Pesticide" is placed prominently at the top of the front label. It also may include a brief statement why it is classified for restricted use. Metam-sodium root control products have the statement that "These products can only be purchased and/or applied by or under the direct supervision of a certified applicator".

2. **Brand Name**

Each manufacturer has a brand name for its products. It is usually the largest and most conspicuous wording on the label. Different manufacturers may use different brand names for the same pesticide active ingredient. Most companies register each brand name as a trademark and will not allow any other company to use that name. The brand or trade name is the one used in advertising and by company salespersons. Brand names are not used by EPA.

3. **Type of Pesticide**

The type of pesticide is usually listed on the front panel of the pesticide label. This short statement usually indicates in general terms what the product will control. The sample label reads "*A Nonsystemic Fumigant Solution for pruning roots in wastewater collecting systems*".

4. **Ingredient Statement**

Each pesticide label must list what is in the product. The percentage of each active ingredient and the total percentage of the inert ingredients are included for each ingredient listed. The ingredient statement must list the official chemical names and/or common names for the active ingredients. Inert ingredients need not be named.

Active Ingredients are those chemical agents in a pesticide mixture that kills or otherwise controls the target pest or pests. **Inert Ingredients** are materials in the formulation that are carriers and have no pesticidal effect.

Chemical and Common Names

Pesticides have complex chemical names which identify the active ingredients. Some pesticides are given another name to make them easier to identify. These are called common names. Although different manufacturers of the same pesticide may use different brand names they can only use one common name. Metam-sodium is the common name for sodium methylthiocarbamate, the chemical name. Only common names are accepted by EPA.

5. **Front Panel Precautionary Statements**

All front panel precautionary statements must be grouped together and they include:

"KEEP OUT OF THE REACH OF CHILDREN"

This statement must appear on all pesticide products regardless of classification or toxicity.

6. **Signal Word**

The signal word DANGER, WARNING OR CAUTION must appear in large letters on the front panel of the pesticide label immediately following the "Keep Out of Reach of Children". It indicates how acutely toxic the product is to humans. The signal word is based not only on the active ingredient alone, but on the contents of the formulated product. Use the signal word to help you determine the precautionary measures to be used.

The signal words are:

DANGER (with skull and crossbones) - all highly toxic pesticides that are very likely to cause acute illness through oral, dermal, or inhalation exposure will also carry the word POISON printed in red and the skull and crossbones symbol.

DANGER - This word signals a high toxic pesticide that is very likely to cause acute illness from oral, dermal, or inhalation exposure, or to cause severe eye or skin irritation. Metam-sodium labels display the DANGER label

WARNING - This word signals that the product is moderately toxic orally, dermally, or through inhalation or causes moderate eye and skin irritation.

CAUTION - This word signals that the product is slightly toxic orally, dermally, or through inhalation or causes slight eye and skin irritation.

7. **Statement Of Practical Treatment (first aid)**

This statement provides instructions on how to respond to an emergency exposure involving that product. The instructions may include first aid measures and may instruct to seek medical help.

8. **Referral Statement**

If the Statement of Practical Treatment (above) is not located on the front panel of the label, then a statement on the front panel must refer the user to the section of the label or labelling where the Statement of Practical Treatment may be found.

9. **EPA Registration and Establishment Numbers**

An EPA registration number indicates that the pesticide label has been registered by the EPA, and will identify both the registrant and the product. If the product is registered in other states it also may include a state registration number.

The establishment number appears on either the pesticide label or container. It identifies the facility that formulated the product and the location of that establishment by state.

10. **Company Name and Address**

The name and address of the manufacturer, registrant, or person or firm registering the product must appear on the label. If the registrant is other than the manufacturer, the label should indicate both parties.

11. **Net Contents**

The front panel of the pesticide label tells how much is in the container. This can be expressed as pounds or ounces for dry formulations and as gallons, quarts, or pints for liquids. Liquid formulations may also list the pounds of active ingredient per gallon of product.

Note that the separately packaged ingredients of this type of root control product has the weight of just that container's contents on the separate labels. The overall package label will have the combined weight of the total product.

12. **Misuse Statement** (not illustrated on Figure 1)

The misuse statement must appear on all products and state in general terms that, "it is a violation of Federal Law to use the product in a manner inconsistent with the label".

Other Statements which may not be on the Front Panel

Precautionary Statements. These usually include statements about possible hazards such as "HAZARDOUS TO HUMANS AND DOMESTIC ANIMALS". If the EPA considers the product to cause delayed effects the label must warn you of this fact. These statements will tell you whether the product has been known to cause tumors or reproductive problems in laboratory animals. If the pesticide has the potential to cause allergic effects, such as skin irritation or asthma then the label or labeling must state this fact.

Personal Protective Equipment (PPE) Statements

Immediately following the statements about acute, delayed and allergic effects the labeling usually will list personal protective equipment requirements. Metam-sodium root control labels are very specific on the PPE requirements. These statements tell you the minimum PPE that you must wear when using the pesticide. An individual may wear more than required, but not less. Also, some states may include requirements greater than the label statement. Consult the product's Material Safety Data Sheet (MSDS) for additional information on PPE.

Environmental Hazards. Metam-sodium labels contain special statements that product is hazardous to aquatic life if not used correctly. This statement reads "Toxic to fish and aquatic life".

Some environmental statements appear on nearly every pesticide label. They are reminders of common sense actions to follow to avoid contaminating the environment. The metam-sodium root

control label follows these general statements with specific toxicity statements and provides practical steps to take to avoid harm to wildlife. For example, the label gives the user specific directions on the following:

- # disposal of equipment washwaters and wastes. "Equipment washwaters and wastes resulting from the use of this product may be disposed of on-site according to label directions for use", by flushing the wastes into the sewer line just treated, "or at an approved waste disposal facility".
- # precautions not to use the product "in storm, field, or other drains unless the effluent is treated in a sanitary sewer system." And, "Keep off lawns and plants as they may be severely injured".
- # how to clean ground areas, "Foam should be shoveled off planted areas immediately rather than washing off with water".

Physical or Chemical Hazards. This section of the label or MSDS warns you of any special fire, explosion, or chemical hazards the product may pose. The metam-sodium root control label reads, "Do not use or store near heat or open flames".

Specific Precautions. The metam-sodium root control products contain two special, **USE PRECAUTION** sections.

Use precautions around buildings. Due to the health risks involved in using metam-sodium products, special precautions are used around people. The metam-sodium root control label has a special warning requiring the applicator to take special consideration of sewer service lines, buildings and basements. The major concern is that the root chemical foam will be inadvertently forced up service lines and into homes, jeopardizing the health and safety of the inhabitants.

Explicit directions for avoiding backups are included in the **USE PRECAUTION** section, "Building drains may be plugged to protect against backup and flooding. Follow the directions for measurement and use carefully to avoid using excess foam that may be forced up lateral lines into building drains.". The label **does not** preclude treating service lines. It states, "Lateral lines may be treated, but do not force excessive foam into service lines which may cause it to be forced up lateral lines to building drains."

Specific directions are given if the situation should arise that the building has been penetrated with the metam-sodium fumes, "Building occupants should exit structures if the pungent, rotten egg odor of metam-sodium is detected. Open windows and ventilate with fans. Flush drains with ample water if the odor comes from them". Also included are specific directions for clean up, "Use squeegee, dust pan, or wet vacuum and garbage bags for spills of backups and dispose of foam and liquid in an open drain or manhole. After removal of foam and liquid, wash area of spill or backup with water and detergent and flush down the drain. If rugs or cloth are contacted, take them outside to dry before laundering them separately".

**See Chapter 5 for greater detail of application concerns near buildings/lateral lines.*

Use precaution around wastewater treatment plants. Because high concentrations of metam-sodium root control chemicals in the waste water may adversely affect the biological sewage breakdown process in the wastewater treatment plants a special **USE PRECAUTION** statement is on this product label.

Specific preventative application procedures are mentioned, "Large scale applications to sewage collection systems in proximity to a sewage treatment plant should be divided into smaller sectional treatments done at one or two day intervals to minimize effects on the sewage treatment process".

To protect the treatment plant and the plant operators, specific directions are given to communicate with the plant operators. Directions are given for detecting the presence of metam-sodium in the plant, "Inform appropriate wastewater treatment plant officials prior to use so they may check for any unusual, pungent, rotten egg or sulfur-like odor of metam-sodium above that of sewage and monitor the performance of filter beds or digesters. If the odor is detected at the sewage treatment plant or the biological breakdown process is adversely affected, root control applications should stop until normal conditions are established".

****See Chapter 5 for greater detail of treatment procedures near wastewater treatment plants.***

Statement Concerning Applicator Category, Storage and Disposal, and Directions for Use.

Applicator Category. A statement restricting the use of this product to a certified applicator appears on the metam-sodium root control labels.

Storage and Disposal Statement. All pesticide labels contain general instructions for the appropriate storage and disposal of the pesticide and its container.

Directions for Use. Pesticide labeling must bear directions for the product use and must be adequate for the protection of the user and the public. Label instructions on intended uses must be clearly stated and in such terms that they will be readily understood by the user.

Note: specific directions for use will be covered more completely in this manual in Chapter 7 - Application.

READING THE LABEL SUMMARY

The following statements will give you an idea of the information you will find in the product label. Although this chapter has not dealt with the complete specific details in the metam-sodium label these topics will be dealt with in detail in the following chapters.

Before you buy a pesticide, read the label to determine:

- # if it is the pesticide you need for the job,
- # if the pesticide can be used safely under the application conditions.

Before you mix the pesticide, read the label to determine:

- # what protective equipment you should use,
- # what the pesticide can be mixed with (compatibility),
- # how much pesticide to use,
- # the mixing procedure.

Before you apply the pesticide, read the label to determine:

- # what safety measures you should follow,
- # where the pesticide can be used,
- # how to apply the pesticide,
- # whether there are restrictions for use.

Before you store or dispose of the pesticide or pesticide containers, read the label to determine:
where and how to store the pesticide,
how to decontaminate and dispose of the pesticide container,
where to dispose of surplus pesticides.

Labels generally list other precautions to take while handling the product. These are self-explanatory:

- # Do not contaminate food or feed.
- # Remove and wash contaminated clothing separately from household clothing before reuse.
- # Wash thoroughly after handling and before eating or smoking.
- # Wear clean clothes daily.
- # Not for use or storage in and around the house.
- # Do not allow children or domestic animals into the treated area.

Test Your Knowledge

- Q. Explain the difference between the terms "label" and "Labeling".
A. The label is information printed on or attached to the pesticide container. Labeling includes the label and all other information received from the manufacturer about the product.
- Q. Explain the differences between brand, chemical and common names.
A. A brand name is usually a trademark used by manufacturers to identify their product. The chemical name is a complex name that identifies the chemical components and structure of a pesticide. A common name is a shorter name that the EPA recognizes as a substitute for the chemical name.
- Q. Name and explain the signal words and symbols you may see on a pesticide label.
A. "Caution" indicates the product is slightly toxic or relatively nontoxic. "Warning" indicates the product is moderately toxic. "Danger" indicates the pesticide is highly toxic and may be a skin and eye irritant. The addition of "Poison" in red and the skull and crossbones indicates the pesticide is highly toxic as a poison.
- Q. What types of hazard statements should you look for on the label?
A. Look for precautions about hazards to human (and domestic animals), environmental hazards, and physical/chemical hazards.
- Q. Describe how a metam-sodium and dichlobenil root control product is packaged and labeled.
A. Each product is packaged and labeled separately. The overall label will list all ingredients in the complete package. The label has a statement "Only for use in combination of metam-sodium, dichlobenil and foaming agent as directed".

RESTRICTED USE PESTICIDE 1.
FOR RETAIL SALE TO AND APPLICATION ONLY BY
CERTIFIED APPLICATORS OR PERSONS UNDER THEIR
DIRECT SUPERVISION

BRAND NAME 2.

Nonsystemic Fumigant Solution for pruning roots 3.
in wastewater collection systems.

Only for use as a combination of metam-sodium, dichlobenil and foaming agent as directed.

4.

ACTIVE INGREDIENT	% by weight
Metam-sodium (sodium methylthiocarbamate).	30%
INERT INGREDIENTS.....	70%
Total.....	100%

Contains 3.18 lbs. active ingredient per gallon.

EPA Reg. No. 64945-3

EPA Est. No. 44616-MO-1

KEEP OUT OF REACH OF CHILDREN 5.
DANGER - PELIGRO 6.

Si usted no entiende la etiqueta, busque a alguien para que se la explique a usted en detalle. (If you do not understand the label find someone to explain it to you in detail).

	STATEMENT OF PRACTICAL TREATMENT 7.
FIRST AID:	Immediately start the procedures given below and contact a Poison Control Center, a physician, or the nearest hospital. Report the type and extent of exposure, describe the victim's symptoms and follow the advice given.
IF ON SKIN:	Immediately flush skin with large amounts of running water for at least 15 minutes while removing contaminated clothing and shoes. Get medical attention immediately.
IF IN EYES:	Immediately flush eyes with large amounts of running water for at least 15 minutes. Hold eyelids apart to ensure rinsing of the entire surface of the eye and lids with water, Get medical attention immediately.
IF INHALED:	Remove to fresh air. If not breathing, clear the victim's airway and start mouth-to-mouth artificial respiration. If breathing is difficult, give oxygen, preferably with a physician's advice. Get medical attention immediately.
IF SWALLOWED:	Immediately give several glasses of water but do not induce vomiting. If vomiting does occur, give fluids again. Have a physician determine if condition of patient will permit induction of vomiting or evacuation of stomach. Do not give anything by mouth to an unconscious or convulsing person.

FOR ADDITIONAL PRACTICAL TREATMENTS: 8.
See Inside Panel of the Label or Labeling

In case of significant spills call
CHEMTREC 1-800-424-9300

Manufacturer 10.
Address

NET CONTENTS: 2.5 gallon 11.

Figure 1.

CHAPTER 5

APPLICATION CONCERNS- WASTEWATER TREATMENT PLANTS LATERAL LINES & BUILDINGS

Learning Objectives

After you complete your study of this unit you should be able to:

- # Know the three major components for handling waste water.
- # Know the difference between a sanitary and storm sewer.
- # Be aware of the variables in a wastewater collection system that influence root control operations.
- # Describe the series of treatment processes that remove wastes from the water.
- # Understand the purpose of waste water treatment ponds (lagoons).
- # Explain the difference between design flow and actual flow.
- # Understand how metam-sodium can affect a treatment plant and the processes involved.
- # Understand the treatment principles in service lines.

Wastewater Treatment Facilities

Raw wastewater and efficiencies of treatment processes vary from plant to plant. This chapter will provide you with an understanding of the basic operation of a treatment plant and will help you determine the potential risks associated with the application of root control chemicals with emphasis on metam-sodium. It is important that you not only understand the operation of sewer collection systems but you must also have a basic understanding of the treatment process.

Facilities for handling wastewater usually have three major components: collection, treatment, and disposal. An understanding of the treatment process is very important for the applicator, especially when introducing foreign materials, such as root control chemicals or grease eating bacteria, into the collection system. For example, the root control chemical, metam-sodium is a general biocide so its potential for affecting the treatment process is directly related to the concentration reaching the treatment plant and the efficiency of that plant's treatment process.

Collection Systems

Collection and transport of wastewater from the source to the treatment plant is accomplished through a complex network of pipes and pumps of many sizes. Typically, the sewer coming into the treatment plant carries municipal wastes from households and commercial establishments and possibly some industrial wastes. This is called a **sanitary sewer**. All storm runoff is collected separately in a **storm sewer**, which normally discharges to a water course without treatment. In some areas, only one network of sewers has been laid out beneath the municipality to pick up both sanitary wastes and storm water in a **combined sewer**.

The collection system consists of a series of interconnecting pipes of varying sizes (from 4" pipe to tunnels in which maintenance personnel can float in boats). The majority of the pipe footage in areas serving buildings is 8" - 12" in diameter. The system is designed to provide gravity flow from the point of collection to the treatment plant. Sanitary sewers are normally placed at a slope sufficient to produce a water velocity (speed) of approximately two feet per second, or more, when flowing full. Usually this velocity will prevent the deposition of solids that may clog the pipe or cause odors. The gravity system is broken up into sections, by manholes which allow maintenance personnel access to the collection system. Design criteria usually place manholes at pipe junctions, changes of pipe grade or direction. Therefore manholes can be spaced between 150 to 1,000 feet, or an average of 250 feet.

Most treatment plants with flows of less than 0.5 million gallons per day (MGD) have pipe sizes 4" - 8" and occasionally 10" - 12". As the plant capacities increase, the pipe sizes increase as lateral flows are collected and approach the treatment plant.

Variables in the Wastewater Collection System that Influence Root Control Applications

Pipe slope is a major design criteria of the collection system. The slope of a sewer is the change in elevation between two manholes divided by the distance between the manholes. Pipe slope and flow velocity can affect the application and detention time of metam-sodium with respect to impacting treatment plants. The design standard for slope is a minimum flow velocity of 2.0' per second with the preferred velocity of 2.5' per second. As the pipes are designed for more slope, the velocity increases. The presence of roots causes the velocities to decrease.

Grade is an important consideration when applying root control chemicals in terms of the effect treatment may have on buildings "below grade". The term grade, although used at times in place of slope, is also used to indicate relative elevation: e.g., a building sewer is termed "below grade" if the elevation of floor drains are below the invert elevation of the upstream manhole. Slope and pipe size and head pressure determine the velocity of the wastewater.

Flow characteristics can affect root growth patterns. Flow may dictate the appropriate treatment method, the rate of root decay after treatment, the rate at which chemicals drift toward the treatment plant, and the rate of dilution of chemicals in the wastewater stream. Flows can be influenced by groundwater infiltration and during peak periods of residential or industrial use.

The amount of flow can affect root control chemicals by diluting them before reaching the treatment plant, or the flow can be a detriment by diluting the root control too much thereby decreasing its effectiveness.

The greater the velocity of sewer flows the greater the rate at which root control chemicals drift downstream. Foam should be injected above the flow surface to reduce the amount of chemical carried downstream. Pipes with particularly heavy or swift flows should be treated at night or during periods of low flow to improve the efficacy of treatment.

The root control applicator should be aware that heavy or swift flows are more problematic with respect to protecting the treatment plant, and should vary the application rates accordingly. The applicator should also be mindful of force mains upstream from the treatment area. Force mains above treated sections which "kick in" after treatment can wash chemicals out of treated lines, and move chemicals downstream towards the treatment plant.

Characteristics of the collection system can affect the efficiency of a wastewater treatment plant and allow the root control chemical to have an unusual influence on the plant. Large water users, such as industries which contribute waste to the collection system, may affect the efficiency of the treatment plant, especially if there are periods during the day or during the year when their waste flows are a major load on the plant. For example, canneries are highly seasonal, making it possible to predict large flows from them. Even in areas where the sanitary and storm sewers are separate, **infiltration** of groundwater or storm water into sanitary sewers through breaks or open joints can cause high flow problems at the treatment plant.

The time required for wastes to reach a plant can also affect a treatment plants efficiency. Hydrogen sulfide gas (rotten egg gas) may be released by anaerobic bacteria feeding on the wastes if the flow time is quite long and the weather is hot; this can cause odor problems, damage concrete in the plant, and make the wastes more difficult to treat (Solids won't settle easily). Wastes from isolated subdivisions located far away from the main collection network often have such "aging" problems.

Pump stations are normally installed in sewer systems in low areas or where pipe is considerably deep under the ground surface. These pump stations lift the wastewater to a higher point from which it may again flow by gravity, or the wastewater may be pumped under pressure directly to the treatment plant. A large pump station located just ahead of the treatment plant can create problems by periodically sending large volumes of flow to the plant one minute, and virtually nothing the next minute. These fluctuating flows can be reduced by using variable speed pumps or short pumping cycles.

Dilution

The size of a wastewater treatment plant determines the amount of dilution of root control chemicals that occurs with wastewater. Concentrations of pesticides are measured in terms of percent of active ingredient (A.I.) per unit of measure. One gallon of 100% A.I. mixed with 999,999 gallons of water represents one part per million ($1 + 999,999 = 1,000,000$). The following is an example of determining the amount of active ingredient need in a particular system.

Estimate the maximum concentration of the active ingredient of a product, in parts per million, in wastewater as it enters the wastewater treatment plant headworks.

Label instructions say to mix 10 gallons of Product (25% A.I.) with 200 gallons of water. This solution is converted into foam at a ratio of 20:1, foam to solution. This material is applied over the course of two hours to a sewer system with flows of 380,000 gallons per hour.

Note: The 200 gallons of water used in the mix, and the foam expansion ratio is irrelevant to the answer.

- (1) 10 gallons of product is applied over two hours, so 5 gallons per hour is applied of a product containing 25% A.I. in one hour. Therefore:
- (2)
$$\frac{5 \times 0.25}{380,000} = \frac{\text{Parts Product (x)}}{1,000,000}$$
- (3)
$$1.25 \times 1,000,000 \div 380,000(x)$$

$$(1,250,000 \div 380,000(x))$$
- (4) $(x) = 3.289$ or the yield is:
- (5) 3.29 parts of A.I. per million gallons (ppm) of water.

Laboratory tests indicate that the "no observable effect limit" (NOEL) for foaming root control products containing metam-sodium and dichlobenil is a concentration of 10 ppm A.I. metam. Seven (7) ppm A.I. metam is used in order to provide a minimal safety margin. By using what we have learned about sewer line flows, we can estimate the amount of active ingredient, or product, necessary to achieve a given concentration.

Example: An applicator learns from the treatment plant operator that average day-time flows are 5 million gallons, and that this is spread evenly over the 8 hour day in which the applicator intends to work. What amount of product can the applicator apply over the 8 hour day to stay under 7 parts per million?

Answer: $5 \text{ MG} \times 7 \text{ PPM} \div .25 (\%) \text{ A.I.}$
 $(3,500,000) \div .25 = 140 \text{ gallons of product}$
 $140 \text{ gallons} \div 8 \text{ Hrs.} = 17.5 \text{ gallons per hour of 25\% A.I. Product}$

Note: No two treatment plants are alike. Two plants with the same flow may react very differently to the same concentration of pesticides in wastewater flow. The biological process of one plant may be under more stress, such as lack of oxygen, chemical pollutants, excessive organic loading, operator error, etc., than a second plant. A treatment plant operating under one or more of these stresses may react to a very small concentration of a pesticide such as metam-sodium and become "upset" (adverse change in the biological decomposition process that can last from hours to days). The same plant, operating well and unstressed, may be able to tolerate several ppm of metam-sodium without effect. Treatment plants become upset for a number of reasons, only one of which may be traced to root control chemicals. A well run plant is usually more tolerant and resilient to pesticides.

The applicator should keep in mind that manufacturer's recommendations should be used only as a guideline. The best source of information about a given plant and how it is responding to root control treatments is the wastewater treatment plant operator. All root control activities need to be cleared and coordinated not only with treatment plant operators but line maintenance and pretreatment personnel as well.

Disposing of Excess Chemicals - Effect on the Plant

Dichlobenil and metam-sodium have certain physical properties which lend them to either absorption or degradation in the pipe section being treated. The foaming method of application retains the metam in the pipe section being treated for a period of time, allowing decomposition to take place, thus reducing the risk to the receiving treatment plant. Excess concentrate or mixed solution should not be "dumped" into the sewer lines as it may not have time to degrade enroute to the plant. The material may hit the plant as a "slug" and temporarily upset the plant.

If the applicator has any unwanted concentrate or solution the safest way to dispose of it is by applying it according to label instructions. Never dump concentrated product or chemical/water solution into the sewer system.

NOTE: To determine the daily recommended dosage of metam-sodium root control chemicals to a particular system see calculation procedures in Chapter 7 - Application of Metam-Sodium Root Control Chemicals.

Treatment Plants

When wastewater reaches a wastewater treatment plant it flows through a series of treatment processes (Figure 2) which remove the wastes from the water. This reduces a potential public health threat before it is discharged from the plant. The number of treatment processes and the degree of treatment usually depend on the uses of the receiving waters.

The following provides an introduction to the names of the treatment processes, the kinds of wastes the processes treat or remove, and the location of the processes in the flow path. Although not all treatment plants are alike there are certain typical flow patterns that are similar from one plant to another. Figures 3, 4 and 5 show possible flow patterns through treatment plants - pond treatment plant, trickling filter plant, and activated sludge. The differences in treatment process, daily flows and treatment plant operating efficiency all affect the treatment plant's ability to tolerate pesticides such as metam-sodium.

When wastewater enters a treatment plant, it usually flows through a series of **pretreatment or preliminary treatment processes** - screening, shredding, and grit removal. These processes remove the coarse material from the wastewater. Flow-measuring devices are usually installed after pretreatment processes to record the flow rates and volumes of wastewater treated by the plant. Pre-aeration is used to "freshen" the wastewater and to help remove oils and greases.

Next the wastewater generally will receive **primary treatment**. During primary treatment, some of the solid matter carried by the wastewater will settle out or float to the surface where it can be separated from the wastewater being treated.

Secondary treatment processes usually follow primary treatment and commonly consist of biological processes. This means that organisms living in the controlled environment of the process are used to partially stabilize (oxidize) organic matter not removed by previous treatment and to convert it into a form which is easier to remove from the wastewater. The current design parameters for secondary treatment plants is to provide 3 - 30 hours detention time in the aeration portion of the treatment process. Retention time design is a function of plant size and plant type, for example a small extended aeration plant would probably require a 24 hour detention time and a 5 - 10 MGD plant 6 - 8 hours detention.

Waste material removed by the treatment processes goes to a solids handling facility and then to ultimate disposal.

Waste treatment ponds, called lagoons, may be used to treat wastes remaining in wastewater after pretreatment, primary treatment, or secondary treatment. Lagoons are frequently constructed in rural areas where sufficient land is available. Flow-through time for lagoons 4 to 60 days depending on the design.

Advanced methods of waste treatment have been developed for general cleanup of wastewater or removal of substances not removed by conventional treatment processes. These method may follow the treatment processes previously described, or they may replace them.

Before treated wastewater is discharged to the receiving waters, it should be disinfected to prevent the spread of disease. Chlorine is usually added for disinfecting purposes. Sulfur dioxide (SO₂) may then be added to the **effluent** to neutralize the chlorine.

The Size of the Wastewater Treatment Plant. The physical size of the wastewater treatment plant is often the most important factor in determining the effects of chemical root control treatments. It is very important for chemical root control applicators to know the size of the wastewater treatment plant downstream from their applications.

TREATMENT PROCESS

FUNCTION

PreTreatment

Influent	
Screening	REMOVES ROOTS, RAGS, CANS & LARGE DEBRIS (HAUL TO LANDFILL)
Grit Removal	REMOVES SAND & GRAVEL (HAUL TO LANDFILL)
Pre-Aeration	FRESHENS WASTE WATER & HELPS REMOVE OIL
Flow Meter	MEASURES & RECORDS FLOW

Primary Treatment


Sedimentation and Flotation	REMOVES SETTLED & FLOATING MATERIALS
-----------------------------	--------------------------------------

Secondary Treatment Solids Handling


	TREATS SOLIDS REMOVED BY OTHER PROCESSES
Biological Chemical Physical Processes	REMOVES SUSPENDED & DISSOLVED SOLIDS
Disinfection	KILLS PATHOGENIC ORGANISMS
Effluent	

Figure 2


Possible flow pattern through a Pond Treatment Plant

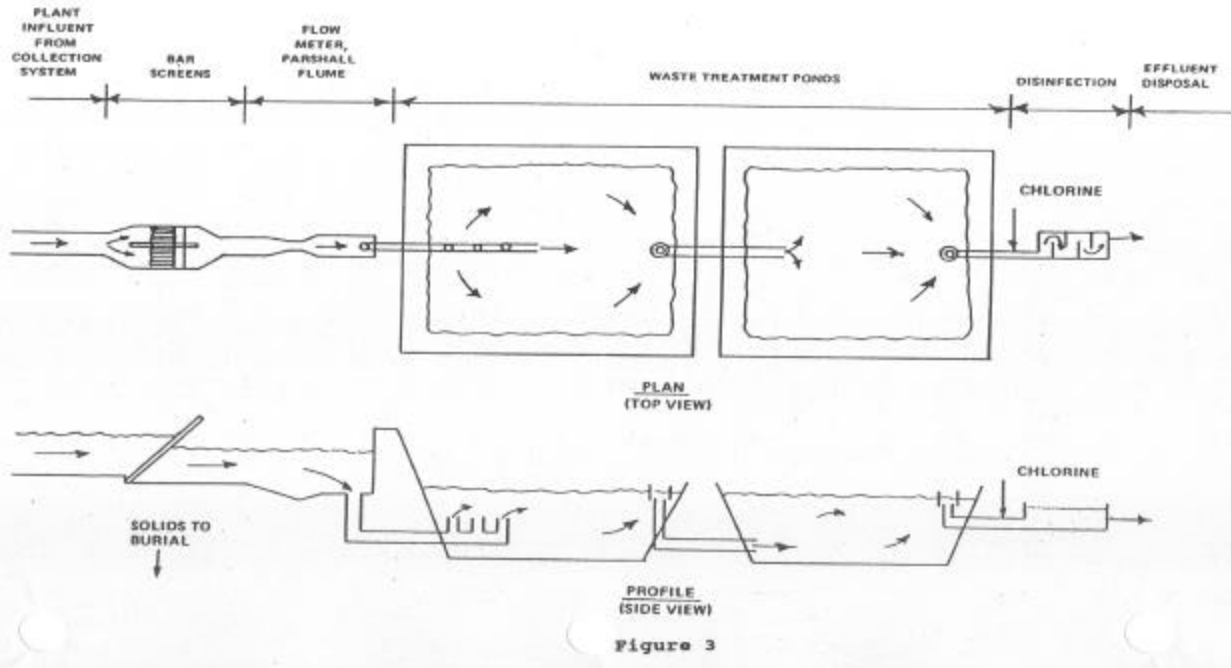

(Con'd) Possible flow pattern through a Trickling Filter Plant

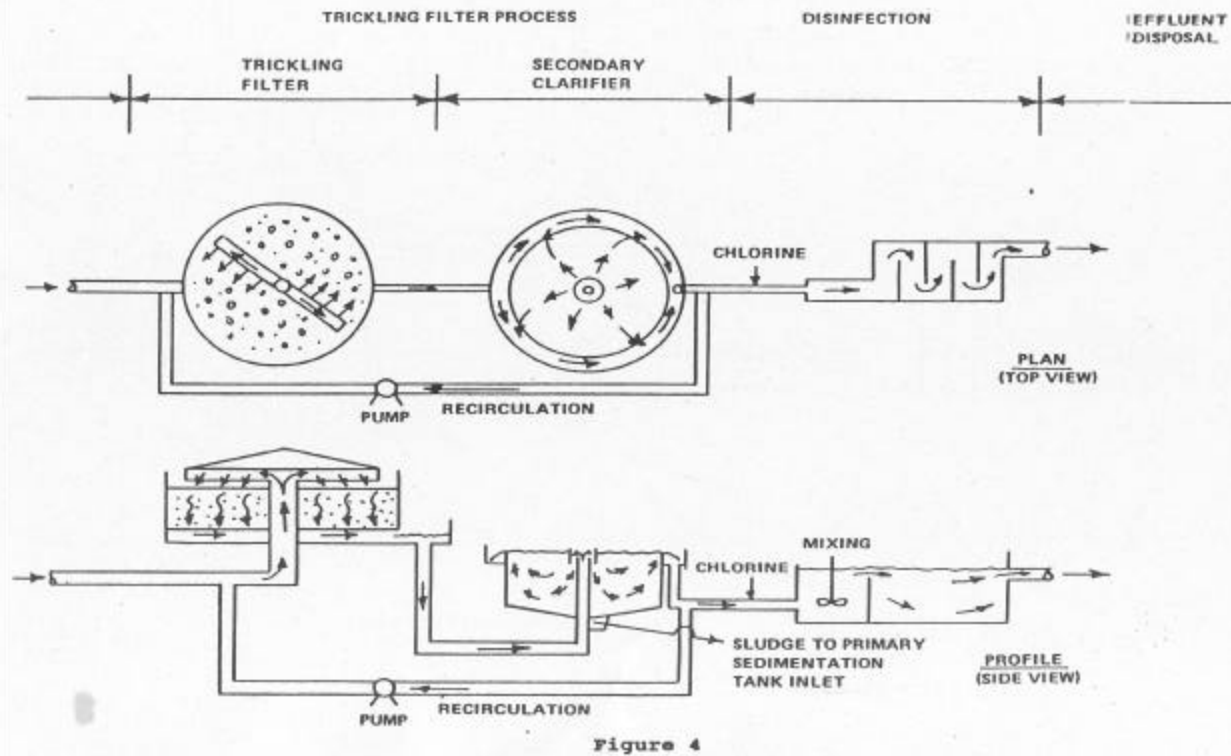

(Con'd) Possible flow pattern through a
Trickling Filter Plant

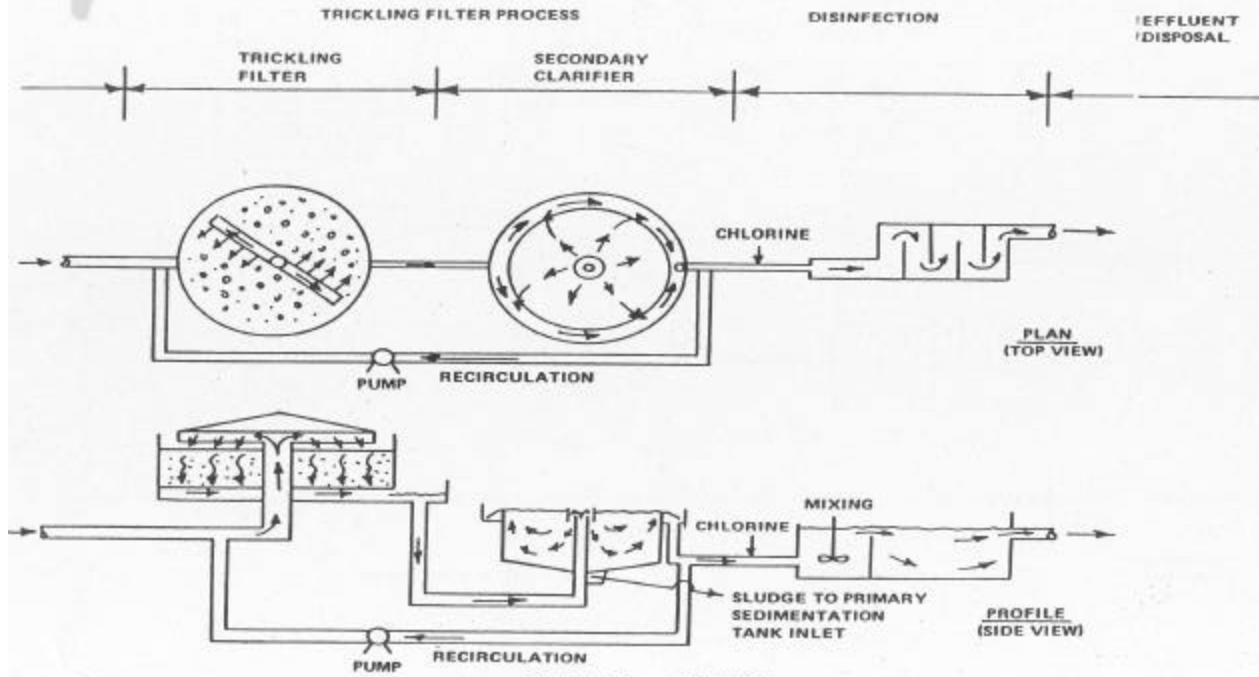

A typical residence, with 3.5 persons, uses 80 - 85 gallons of water per person per day. This figure does not include industrial use. Using this figure, we could estimate the daily flow for a community of 20,000 people to be approximately 1,600,000 gallons of water per day, excluding industrial discharges. Daily flows are referred to as "million gallons per day" (MGD) so this treatment plant would be a 1.6 MGD plant. If industrial flows are added to that of a residential community then a combined water flow of 100 gallons per person would result. Also, if there is excessive groundwater infiltration this would impact the daily flow rate

The size of a wastewater treatment plant is measured in terms of the amount of wastewater it is capable of treating. When discussing flows into wastewater treatment plants, it is important to distinguish between design flows and actual flows. Design flow is the amount of wastewater that the treatment plant is designed to handle on a daily basis. Actual flows are just that - the actual volume of water that enters the treatment plant on a given day. If the capacity of a wastewater treatment plant is exceeded, excess flows are by-passed around the treatment plant and dumped directly into the receiving waters. Some treatment plants have large basins to temporarily store untreated flows.

Generally, most flows in a sanitary sewer system occurs during the day time hours. A Generally estimate is that one-half or more of the daily flow of a wastewater treatment plant occurs between 6:30 - 8:30 a.m. and 4:00 - 9:00 p.m.. This estimate could vary depending on local industries and inflow/infiltration rates.

The wastewater treatment plant operator can provide information about the amount of flow entering a wastewater treatment plant at any given time.

Example: Calculate a reasonable estimate of the day-time (8 a.m. to 5 p.m.) hourly flows for a wastewater treatment plant with a design capacity of 10 MGD, and an actual flow of 7 MGD.

Answer: Note: design flows should not be used when calculating actual flow rates. The figure 7 MGD should be used. We can assume that half the flow occurs during the 8 a.m. to 5 p.m. period, then the hourly flow is:

$$(1) 7 \div 2 = 3.5$$

$$(2) 3.5 \div 9 = 0.38 \text{ MGD (380,000 gallons per hour)}$$

Note: In practice, do not estimate hourly flows for low volume plants - ask the treatment plant operator for the hourly rate.

In order to determine the probable impact of a metam-sodium application on a specific treatment plant, one must consider: the type of application; length of pipe; size of pipe; slope of pipe; distance from the treatment plant; slope to treatment plant; type of treatment; size of treatment plant; method of operation; and existing biological stability. Finally, one must consider the rate of breakdown of metam-sodium in an aqueous solution and more specifically, the breakdown in high organic environments, such as sewers.

Variables in the Wastewater Treatment Facility that Influence Root Control Applications

A large number of variables exist when assessing the probability of an adverse impact on a wastewater treatment plant due to the use of metam-sodium for sewer root control. These variables may be combined into: 1) collection system (pipeline) and 2) treatment plant. The following summary of events in the sewer system provides reference calculations to assist metam-sodium applicators.

Root Control Chemicals Containing Metam-Sodium

The phrase, ". . . wipeout or blowout treatment plant" suggests a vision of a wall of rushing water destroying the treatment plant. A more appropriate term is a "biological upset". Upsets can be caused by: changes in loading (biodegradable solids); hydraulics; pH; toxic chemicals (metam-sodium, gasoline, paints, solvents, etc.); operator errors; and mechanical breakdowns. The intensity and duration of these upsets last for a few hours to several days. All treatment plants experience biological upsets from time to time, while

some may have several upsets a year. Smaller treatment plants are more susceptible to upsets because one event probably represents a larger percent of the plants flow than would be experienced by a larger plant.

When treatment plants are upset following treatment with products containing metam-sodium and dichlobenil, metam is usually the culprit. Dichlobenil has a relatively low toxicity, and little or no effect on microorganisms at the wastewater treatment plant. Metam-sodium of itself does not cause a treatment plant problem, but its breakdown products do. Previously you saw that Metam-sodium in the presence of water decomposed to form MITC, CS₂, H₂S, and other products. These products begin to evolve in the sewer line before reaching the plant. Foaming methods of application enhance degradation of metam by: 1) reducing the pH, 2) injecting large quantities of air, and 3) diluting the material with water, and 4) slow breakdown of foam which extends the release of metam into the sewer flow, increasing time and dilution.

The time required for the wastewater containing metam-sodium to travel from the point of application to the treatment plant, combined with its dilution in wastewater are the key factors affecting treatment plant upset.

Treatment plant features that may be affected by Metam-sodium decomposition products are: bacteria population, species diversity, age of population, dissolved oxygen, amount of flow, sludge inventory. Flow conditions and proximity to the plant are important considerations in determining the safe application of metam-sodium.

Effects of Chemical Root Control on Wastewater Treatment Plant Processes

The sewer line root control applicator is responsible for insuring that an application does not adversely affect the performance of the wastewater treatment plant. Root control applications should not be made where there is likelihood of adverse effects on a plant.

Wastewater treatment plants are biological systems and depend on the growth and reproduction of microorganisms. Root control chemicals are effective because they are toxic to tree roots. These same chemicals can be toxic to the microorganisms at the wastewater treatment plant. In fact, most substances are toxic in large enough quantities, but pesticides are active at parts per million levels.

Plant upset violations must be avoided. Treatment plant operators do not consider risking upset as an option. Municipal treatment facilities are faced with \$25,000 per day penalties for National Pollutant Discharge Elimination System (NPDES) permit violations resulting from "upset conditions"

NOTE: Always consult the wastewater treatment plant operator before applying any chemical to a wastewater collection system. All consultations need to be careful and complete. Notice of treatment should be made to pretreatment and line maintenance personnel. The wastewater treatment plant operator can monitor the performance of the plant, and alert the applicator to any adverse effects before the plant goes into upset or violates its NPDES permit.

Several factors influence the way in which pesticides impact a sewage treatment plant. The most important are:

1. type of pesticide and physical properties of the pesticide,
2. flow conditions in the pipe being treated and application method,
3. size of the wastewater treatment plant and dilution factors,
4. size of the lines being treated and distance from the plant,
5. total rate at which pesticides are applied to the system, and
6. individual characteristics of the plant and the extent to which the microbe population at the plant is acclimated to synthetic organics.

Foam Application of Root Killing Chemicals To Building Service Laterals

Extreme caution should be taken when treating building service lines. As the name implies these pipes are connected directly to buildings and the chance of accidentally forcing foam root killers through the pipe and into the building is always present.

Building service lines connect the building to the sewer main which is usually in the street in front of the building or in an alley (back lot line easement) behind the building. The service lines are usually 4" to 6" diameter and have been installed at various times, as buildings were erected, by a number of different people over the years. Records of where these lines go, which buildings are connected to a specific line, and conditions of the pipe are usually non-existent.

Building service lines are normally treated in one of two ways:

- when treating the main line with a sufficient amount of foam to fill the main pipe as well as force foam into service laterals, and
- installing a foam through plug at the building end of the service line and forcing foam through the service lateral to the main line.

Factors to Consider When Treating Service Lines with Foam

- # Foam will follow the path of least resistance.
- # Service laterals are normally small diameter pipe (4") and a small amount of foam will go a long way: For example:
 - 8" pipe = 2.6 gallons of foam treatment per foot
 - 4" pipe = 0.65 gallons per foot (a four fold difference)
- # It is much easier for a root mass to entirely block a 4" pipe than an 8" pipe. Calculations of the volume of foam to treat a specific pipe are based on clean empty pipe. Root masses reduce that volume. Root masses affect the volume of a 4" pipe much more than a larger pipe such as 8".
- # What may look like a simple service lateral from a building to a main line may have other building laterals connected to it. As sewer technicians know, building areas were often smaller groupings of homes and commercial buildings built by different developers or individuals. After several growth years these have finally grown together into one developed community. The applicator can not be assured that all of these smaller building areas have underground utilities that fit today's designs and materials. There may be some surprise connections.
- # The applicator should not rely on any one's (even his own) memory as to how a service lateral was constructed. If possible the line should be televised prior to treatment to determine any areas that could cause concern in the foaming operation.
- # Ninety nine times out of a hundred the conditions of the particular service line is an "unknown". The applicator should proceed with caution and not treat if there is any doubt.

Sewer Main to Building

When treating the main line, a common practice is to increase the amount of foam applied in order to force the excess into service lines thus providing root thus providing root control. On the surface this practice appears to be an excellent idea, however, this practice involves significant risk of accidentally forcing chemical foam into buildings. Essentially the applicator reduces the rate of hose retraction during the foam application process, since foam taking path of least resistance will travel through the service lines.

Don't ever attempt to treat more than the lower 10' - 20' of service lateral by this method. Normal treatment of the main pipe is sufficient to kill roots at the service connection. The higher the percentage of service lateral length you attempt to treat by this method the greater the risk of accidental contamination in a building.

Risk factors in buildings are:

- # basements with below grade plumbing,
- # floor drains,
- # dry traps,
- # reduced sewer pipe volumes due to flow, low spots or root masses, and
- # unknown connections to the service lateral being treated.

Building to Sewer Main. (Pump through plug)

This method of application is less risky than attempting to treat service laterals from the main line. However, it is not without risk. In principal a plug is inserted in the service lateral between the point of treatment and the building thus blocking the foam from entering the building.

The most common procedure is to use a specially designed air plug that be inserted through a clean out. The plug is simply a 1" hose with an air bladder molded around the outside. The hose is inserted through a clean out into the down stream sewer pipe. The bladder is than inflated. Foam is pumped through the hose and is forced down the service lateral to the main. The inflated bladder blocks the foam from exiting the clean out or being forced back toward the building. Although not recommended, this process can be used from a clean out on the interior of the building.

Risk factors may be:

- # unknown connections to the service lateral being treated,
- # inserting hose into upstream pipe instead of down stream,
- # handling chemical on private property - accidental spills on landscaping or in buildings,
- # when treating from within buildings the location and configuration of the building plumbing may not have pipe branch connections between the hose plug (treatment location) and the main line.

Treating service laterals is high risk. If there is any question as to the exact configuration of service laterals do not treat. Do not treat service laterals from buildings to which you do not have access at time of treatment. Have a spotter in all buildings when service laterals are being treated.

Test Your Knowledge

- Q. What are the three components of handling waste water?
A. The three components are collection, treatment and disposal.
- Q. What is the difference between a sanitary sewer and Storm sewer?
A. A sanitary sewer collects waste form buildings and transports it to a treatment plant before emptying into a watercourse. A storm sewer collects surface runoff water and transports it directly to a watercourse.
- Q. Name several variable in a wastewater collection system that will influence root control operations.
A. Root control operations may be affected by the pipe slope/grade, the flow, characteristics of the collection system, aging of the wastewater and generation of gasses.
- Q. Describe the series of treatment processes removing waste from water.
A. Pretreatment/preliminary removes coarse material from the wastewater. Primary process involves settling out or floating solid matter for removal. Secondary treatment consists of biological processes converting missed solids into more easily removed material.
- Q. What is the purpose of waste treatment ponds (lagoons)?
A. To treat wastes remaining after the other processes. Flow through time is 4-60 days, depending upon design.
- Q. What is the difference between design flow and actual flow.
A. Design flow is the amount of flow a system is designed to handle daily. The actual flow is the amount of flow actually passed through a system daily.
- Q. How can metam-sodium seriously affect the operation of a treatment plant.
A. If a plant is under stress the addition of even a small amount of metam-sodium could upset the biological processes and last from hours to days.
- Q. What is the applicator's main concern when treating building service lateral line?
A. Forcing foam root control pesticide through lateral lines into buildings.

CHAPTER 6

SAFE HANDLING OF METAM-SODIUM ROOT CONTROL PRODUCTS

Learning Objectives

After you complete your study of this unit you should be able to:

- # understand the significance of the Equation "Hazard = Toxicity X Exposure".
- # utilize first aid procedures when using metam-sodium products.
- # select and wear appropriate personal protective equipment.
- # utilize safe practices when storing, mixing, handling, disposing and transporting pesticides.
- # explain a closed handling system
- # know how to conduct spill control procedures and contact appropriate authorities.

Most pesticides are designed to kill pests. Because some pests have systems similar to the human system, some pesticides can harm or kill humans. Some pesticides (Danger label) are highly toxic to humans whereas others (warning or caution labels) are less toxic. The chance of an individual being harmed by a pesticides is frequently depicted by the equation: **Hazard = Toxicity X Exposure**. Hazard is the risk of harmful effects from pesticides. Hazard depends on both the toxicity of the pesticide and the amount of contact (exposure) with that pesticide.

Types of exposures. Pesticides contact your body in four ways.

- # oral exposure (swallowing a pesticide),
- # inhalation exposure (breathing pesticide fumes),
- # ocular exposure (splashing pesticide in your eyes), or
- # dermal exposure (pesticide on your skin)

Toxicity. The toxicity of a particular pesticide depends on a number of factors:

- # type and amount of active ingredient(s),
- # type and amount of carriers,
- # type and amount of inert ingredients, and
- # type of formulation.

Harmful effects. Pesticides can cause three types of harmful effects: acute effects, delayed effects, and allergic effects.

Acute effects usually occur within 24 hours after exposure to a pesticide as a result of a single exposure to a high level of pesticide. These effects are easy to determine.

Delayed effects do not appear until long after exposure to a pesticide. Usually, these effects are a result of repeated exposures to low levels of a pesticide. These effects are much more difficult to determine. Especially, with conditions such as cancer, birth defects, etc.

Allergic effects are reactions to a substance that do not cause the same reaction in other people. These are thought to occur in a person's first exposure to a substance. The first exposure causes the body to develop a repelling effect, and subsequent exposures will result in the allergic response. These allergic effects can be:

- # systemic effects such as asthma, or life threatening shock,
- # skin irritation such as rashes, blisters or open sores, and

eye and nose irritation, such as itchy, watery eyes and sneezing.

First Aid and Pesticide Poisoning Recognition

Pesticide Poisoning Recognition

Watch for two kinds of clues to determine pesticide related illness or injury. One is where the affected individual experiences such symptoms as nausea or headache. The other, like vomiting or fainting can be noticed by others. The applicator should know what these signs mean, and what signs to look for in coworkers and others who may have been exposed.

Poisoning by certain families of pesticide will result in distinctive signs that help others recognize the cause of poisoning. For example organophosphate and carbamate pesticides are identified by pin pointing pupils of the victims eyes. Arsenic and phosphorus poisoning is often identified by a garlic odor on the victim's breath. If you have been working with pesticides and then develop suspicious signs and symptoms visit your doctor or nearest medical facility. Only a physician can diagnose pesticide poisoning injuries.

First Aid for Metam-Sodium Root Control Products Exposure

Read the first aid instructions on the label of a metam-sodium root control pesticide. Immediately start procedures shown below and transport the victim to a poison control facility, poison control center or a physician. Provide medical personnel with the name of the pesticide, type and extent of exposure, victim's symptoms, and if possible a copy of the pesticide's label. The following practical treatment should be provided if the pesticide was:

- # **on the skin:** Immediately flush the skin with large amounts of water while removing contaminated clothing. Seek medical attention if symptoms develop.
- # **in the eyes:** Immediately flush the eyes with large amounts of water for at least 15 minutes. Hold eyelids apart to ensure adequate rinsing of the entire eye surface and lids. Seek medical assistance.
- # **inhaled:** Remove the victim to fresh air. If breathing has stopped, clear the victim's airway and begin artificial respiration (mouth to mouth). If breathing is labored give oxygen, preferably under a medical expert's advice. Seek immediate medical assistance.
- # **swallowed:** Immediately give several glasses of water. **DO NOT INDUCE VOMITING.** If vomiting does occur, give fluids again. Do not give anything by mouth to an unconscious person. Seek immediate attention.

Protecting Your Body

When a pesticide is purchased, the buyer has very little control over the toxicity of the product. The applicator may select the least toxic of the products available for a particular job. Also, the applicator can select the least toxic formulation available for a particular (dry formulations are less likely to be absorbed than liquid formulations). However most factors are determined by the manufacturer. For root control in sewers, metam-sodium with dichlobenil is the pesticide of choice. This does not allow an applicator many options for selection. The pesticide available has a **DANGER** signal word which indicates it is highly toxic. Further, Metam-sodium is a liquid formulation which is absorbed more readily than a dry formulation, by the body. The only means available to the applicator to control a hazard from metam-sodium is to limit exposure to that pesticide.

Personal Hygiene. Since pesticides can be absorbed through the skin, it is important to shower at the end of every day you have been working with pesticides. Wash your body and scalp thoroughly with soap and water. In addition, wash your hands before eating, drinking, smoking and chewing gum or tobacco.

Also, since pesticides are easily absorbed through the genitals, wash your hands before using the bathroom. Always have soap, water and paper towels available on the job site in case you contact the pesticide.

Personal Protective Equipment

The best method of protecting your body from exposure to a pesticide would be to erect an impermeable barrier between you and the pesticide. Since you work with pesticides, that may require mixing and applying in unusual places, this would be impossible. The next best method of placing a barrier, of sorts, between you and the pesticide is through the use of personal protective equipment (PPE). PPE is clothing and devices worn to protect the human body from contact with pesticides or pesticide residues.

Ordinary shirts, pants, shoes and regular work clothing are not considered PPE, although the pesticide's label/labeling may require you to wear specific items of work clothes during some activities. **You are legally required to follow all PPE instructions that appear on the label or in the labeling.**

To prevent pesticides from entering the body you must wear protective clothing and equipment. The applicator must follow all advice about protective clothing or equipment which appears on the chemical product label. However, the lack of any statement or the mention of only one piece of equipment does not rule out the need for additional protection. No safety recommendations can cover all situations. Your common sense and knowledge of pesticide toxicity should help you assess the hazard and select the kind of protection you need. The following protective clothing is required for those applicators actually engaged in carrying out any operations that are likely to involve direct contact with metam-sodium root control chemicals, including:

- # mixing - loading,
- # equipment calibrations or adjustments,
- # cleaning and repair of application equipment,
- # entering into treated areas,
- # sampling,
- # cleanup of spills,
- # rinsate disposal, or
- # any other activity likely to result in direct contact with the product.

The following protective equipment must also be used for any operations that are carried out within six feet of unshielded, pressurized hoses containing metam-sodium.

- # Splash resistant eye protection,
- # Body covering including shirt and long pants or long-sleeved clothing. When a closed system is not used, mixers and loader must also wear chemical-resistant apron or cloth coveralls, and
- # Chemical-resistant boots and elbow length gloves.

The following protective equipment must be *worn at all times* by people operating or monitoring metam-sodium root control application equipment:

- # Chemical-resistant footwear, and
- # Body covering including shirt and long pants or long sleeved clothing.

Also, the following protective equipment must be available, at all times, for use by people operating or monitoring application equipment:

- # A proper fit tested NIOSH or MSHA approved, half face, respirator with organic vapor cartridge(s) plus splash resistant eye protection or a NIOSH or MSHA approved full face respirator with organic vapor cartridge(s). **This equipment must be worn in case of emergencies or leaks when the pungent, rotten egg, or sulfur-like odor of metam-sodium is detected.**

Chemical-resistant gauntlet-type gloves. **These must be worn when a person is engaged in carrying out any operation that is likely to involve direct hand contact with the product.**

Body Covering. Any time you handle pesticides you should wear at least a long-sleeved shirt and long-legged trousers, or a coverall-type garment. This apparel should be made of woven or laminated fabric. The sewer technician mixing or loading chemical must also wear a chemical resistant apron or cloth coveralls.

Gloves. When handling concentrated or highly toxic pesticides wear chemical resistant gloves. For the liquid formulation of metam-sodium root control chemicals chemical resistant gloves are required. The gloves must be long enough to protect the wrist and gauntlet-type to keep pesticides from running down the sleeves. Gloves should not be lined. The lining absorbs chemicals and is hard to clean.

Hat. Plastic "hard hats" with plastic sweatbands are chemical resistant and are cool in hot weather. Hard hats are a normal requirement of sewer technicians and should be worn for confined space entry by the worker and the assistant outside the confined space.

Shoes and Boots. Chemical resistant footwear is required apparel at all times by people operating or monitoring application equipment for metam-sodium root control products. Neoprene or rubber boots are a wise precaution with many pesticide applications because canvas, cloth, and leather shoes can readily absorb pesticides. Wear unlined boots with trouser legs outside the boots so the pesticide will not run down the leg and collect in the boot.

Goggles or Face Shield. Wear goggles or a face shield when there is any chance of getting pesticide in your eyes. Eyes readily absorb pesticides and the temporary blindness caused by an accident may delay or prevent self treatment. You can wear goggles alone or with a respirator.

Care of Clothing. Wear clean clothing daily. If clothes get wet with pesticides change them immediately. Always keep a clean changes of clothing on the work site for such emergencies. When laundering contaminated clothing, gloves should be worn and contaminated clothing should not be washed with family laundry. Wash hats, gloves, and boots daily, inside and out. Hang them to dry. Test gloves for leaks by filling them with water and gently squeezing. Check the product's label and labeling for any special instructions

Wash goggles or face shields at least once a day. Wear neoprene headbands, if possible. Elastic fabric headbands often absorb pesticides and are difficult to clean. Have some spares available so you can replace them as necessary.

Respirators. The respiratory tract, the lungs and other parts of the breathing system, is much more absorbent than the skin. You must wear an approved respiratory device when the label directs you to do so. Even if the label does not require it, you should always wear respiratory protection under the following conditions:

- # if the pesticide you are mixing or applying has a label precautionary statement such as "do not breathe vapors or spray mist", or "harmful or fatal if inhaled,"
- # during calibration and adjusting of equipment if you are using pesticides with the above precautionary statement,
- # if you will be exposed to a pesticide for a long time, and
- # if you are working in an enclosed area.

If you have trouble breathing while wearing a respiratory device, see your physician to determine if you have a respiratory problem. Note: some states may require a physicians examination before an employee can wear a respirator. Respirator selection and fit are extremely important. Always follow the manufacturers recommendations on fitting procedures. Always use NIOSH or MSHA approved

equipment with cartridges or canisters recommended for the pesticide products being used. The metam-sodium root control products require a half-face or full face respirator with an organic vapor cartridge. The respirator is required to be worn when the pungent rotten egg or sulfur-like odor of metam-sodium is detected.

Cartridge Respirator. You should wear this kind of respirator when you will be intermittently exposed to a pesticide. Inhaled air is drawn through both a fiber filter pad and a cartridge to absorb pesticide vapors. Most harmful vapors, gases, and particles are removed. These half-face masks cover the mouth and nose. To cover the eyes also, use one that is combined with goggles, or wear separate goggles.

Canister Respirator (gas mask). You should wear this kind of respirator when you will be continuously exposed to a pesticide. The canister has longer-lasting absorbent material and filters than the cartridge respirator. Gas masks usually provide full-face protection. Neither cartridge nor canister respirators will protect you from high concentrations of vapor, and neither kind is effective when the oxygen supply is low; for example, inside manholes, tanks, or lift stations. In these cases an air supplying respirator or self-contained breathing apparatus (SCBA) will be required.

Maintenance of Respirators. When applying pesticides, change filters, cartridges, and canisters according to the equipment's instruction label or daily. Replacement filters, cartridges or canisters should always be available at the work site. Remove and discard filters, cartridges, and canisters after use. Then wash the face piece with detergent and water, rinse it, and dry it with a clean cloth. Put in an air tight bag and store it in a clean, dry place away from pesticides.

Safety Procedures for Personnel Working in Wastewater Systems

Company Policy and Confined Space

In the wastewater industry the dangers of working with pesticides is coupled with the dangers inherent in the working conditions of the wastewater system. It is very important that the applicator's firm or municipality have procedural policies, for safety, that each employee is aware of and is required to follow.

Company policies should include basic statements noting that no worker is required to undertake a task if the worker: 1) does not feel that the job is safe or healthful, 2) was not provided with adequate training or necessary safety equipment, 3) is not provided with the proper job instructions. Workers should be aware that these basic rights are protected by the Occupational Safety and Health Administration.

Entry Procedures

The sewer applicator should follow the company's or municipality's policies in entering confined spaces. These policies should include specific instructions in:

- # testing for toxic gases,
- # monitoring air quality,
- # ventilating work area, and
- # using safety harness for emergency ascent

Transporting, Storage, Mixing, Handling Pesticides

Transporting Pesticides

The sewer applicator is responsible for the safe transport of pesticides in his/her possession. Pesticides should be transported in the back of a truck, and all containers should be secured to prevent breakage and spillage.

Pesticides should be transported only in correctly labeled containers. Be sure to keep paper and cardboard packages dry. If any pesticide is spilled in or from the vehicle, clean it up right away using correct clean up procedures. Refer to specific product labeling and Material Safety Data Sheets (MSDS) for clean up procedures. Do not leave pesticides unattended. Depending on state law, the certified applicator, the company, or all may be found at fault.

Pesticide Storage

The storage building or area should be located away from where people and animals live. This will avoid or minimize any harm to them in case of fire or flooding. The area should be fenced if possible. Keep the building and storage area locked to prevent entry by children and other unauthorized people and post warning signs on doors and windows. The storage area should be in a cool, dry, well-ventilated and well-lighted room or building that is insulated to prevent freezing or overheating. Be sure that the area is fireproof, with a cement floor. As soon as pesticides arrive, store them in a safe place. Check the product label for special storage instructions. In the absence of storage instructions, containers should be rotated as needed. Store all pesticides in the original containers. Do not store them near food, feed, seed, bulbs, tubers, nursery stock, or other vegetation. Store paper containers off the floor. Check every container for leaks or breaks. If one is leaking, transfer the contents to a container that has held exactly the same pesticide. If one is not available, use a clean container of similar construction and label it correctly. Clean up any spills. Keep an up-to-date inventory of the pesticides you have.

Keep a spill kit available. This should include: detergent, hand cleaner, and water; absorbent materials, such as absorbent clay, sawdust, and paper to soak up spills; a shovel, broom, dustpan and chemical resistant bags to collect contaminated material; and a fire extinguisher rated for ABC fires.

Mixing and Loading Pesticides

Studies have shown that pesticide applicators/handlers are most often exposed to harmful amounts of pesticides when handling concentrates.

Workers involved in mixing and loading undiluted highly toxic pesticides are exposed to a high risk of accidental poisoning. Pouring concentrates from one container to another is the most hazardous activity.

By observing some simple precautions the sewer applicator can reduce the risks involved in this part of the job. It is important to keep animals, pets, and people who are not involved in the mixing and loading out of the work area. Do not work alone when using highly toxic pesticides. Choose a place with good light and ventilation. Be particularly careful not to mix or load pesticides unless lighting and ventilation are adequate.

Before handling a pesticide container, put on protective clothing and equipment. Each time you use a pesticide, read the directions for mixing. Do this before you open the container. This is essential because labels can change often.

Do not tear paper containers to open them. Use a sharp knife. Clean the knife afterwards and do not use it for other purposes. When pouring a pesticide from the container, keep the container and pesticide below eye level. This will avoid a splash in the face or eyes.

If you are splashed or spill a pesticide on your body while mixing or loading, stop right away and remove contaminated clothing. Wash thoroughly with soap and water as quickly as possible. Then clean up the spill.

When mixing pesticides, measure carefully. Use only the amount called for on the label and mix only the amount you plan to use.

When loading pesticides, stand so the wind is at your back to blow pesticide away from your body. To prevent spills, close containers after each use.

Closed Handling Systems. Closed handling systems can reduce the applicator's exposure to concentrated pesticides. A closed handling system allows the applicator to remove a pesticide from its original container, rinse the empty container, and transfer the pesticide and rinse solution to the mix tank without contacting the pesticide.

There are two systems to remove the pesticide concentrate from the original container : gravity, and suction.

Gravity systems are sometimes called "punch and drain" system. The unopened pesticide container is inserted into a chamber, which is then sealed. A punch cuts a large opening in the container, allowing all of the material to drain into the mixing tank. A water nozzle attached to the punch sprays the inside of the container to rinse it thoroughly. The rinse water also drains into the mixing tank. The rinsed container is then removed for disposal. A limitation of this system is that only full container quantities can be used. It is not possible to use part of the pesticide in a container and store the rest.

Suction systems use a pump to remove the pesticide through a probe inserted into the container. Some containers are equipped with built-in probes. The pesticide is transferred to the mixing tank by hose and pipe. When the container is empty, it and the transfer system are rinsed with water. The rinse water is added to the mixing tank.

Closed handling systems are not easily obtained. The ones in operation are for use only with liquid formulations. A problem with metam-sodium root control products is introducing the dry formulated ingredient, dichlobenil, to the application. One technique under development is packaging the dry ingredient in a soluble bag. This allows the applicator to put the entire package into the tank where it will dissolve

Cleaning Application Equipment

Never leave pesticide equipment or containers unattended at the application site. If using equipment that has a small chemical mix vessel the equipment can be flushed with water and emptied into the treated manhole. Only cleaning rinsate should be disposed of in this fashion, be sure the cleaning procedure does not include unused product remaining in the chemical vessel or chemical/water mix tank.

Do not contaminate water when disposing of equipment washwaters. Equipment washwaters and wastes resulting from the use of metam-sodium root control products may be disposed of on site by putting it in the treated sewer, or at an approved waste disposal facility. Do not put rinsate in potable water systems, or storm, field or other drains unless the effluent is treated in a sanitary sewer system.

If using equipment with a large chemical/water mixing tank return the equipment to the area designated for equipment cleanup, and clean according to the manufacturer's directions.

Application equipment must be cleaned as soon as you finish using it to keep the equipment in good operating condition. Have a special area for cleaning.

Aside from the fact that dirty equipment is a source of potentially hazardous pesticide residue, dirty equipment can cause plug ups or other equipment malfunctions that could be the source of incorrect applications or hazardous equipment failures at the job site. Clean both the inside and outside, including nozzles. Only trained handlers should do this job. They should wear correct PPE and follow the equipment manufacturers cleaning instructions.

Disposal

Pesticide wastes are toxic. Improper disposal of excess pesticide, spray mixture, or rinsate is a violation of Federal Law. If these wastes cannot be disposed of according to label instructions, contact your State Pesticide or Environmental Control Agency or the Hazardous Waste Representative at the nearest EPA Regional Office for guidance.

Excess Pesticides. EPA recommends ways to dispose of excess pesticides. Consult local authorities for procedures in your area. Consult the label for disposal instructions or precautions.

If you have excess pesticides:

- # Use them up as directed on the label.
- # Take the pesticides to a landfill operating under EPA or state permit for pesticide disposal. (Most solid waste landfills are not suitable.)
- # If you cannot dispose of them right away, store the pesticides in a secure storage area with similar pesticides until you can.

Containers. Do not leave pesticides or pesticide containers at the application site. Never give pesticide containers to children to play with or adults to use. Leftover pesticides should be kept in tightly closed containers in your storage facility. Always triple rinse empty containers of liquid pesticides as follows:

1. Empty the container into the tank. Let it drain an extra 30 seconds.
2. Fill container 1/10th to 1/4th full of water
3. Replace the closure and rotate the container. Invert the container so the rinse reaches all the inside surfaces.
4. Drain the rinse water from the container into the tank. Let the container drain for 30 seconds.
5. Repeat steps 2 through 4 at least two more times for a total of three rinses. Remember to empty each rinse solution into the tank.
6. Rinsate from sewer use pesticides may be disposed of in the sewer system being treated.
CAUTION: Do not dispose of unused pesticide concentrate or pesticide/water solution in this manner.

Offer empty containers for recycling or reconditioning, or puncture and dispose of in a sanitary landfill.

Cleanup of Pesticide Spills

Minor Spills

Control the spill. Prevent further spill. Keep people away from spilled chemicals. Rope off the area and flag it to warn people. Do not leave unless someone is there to confine the spill and warn of the danger. If the pesticide was spilled on anyone follow appropriate cleanup procedures.

Confine the spill. Prevent the spill from spreading by building a dike of soil, or sand around the spill.

Clean up the spill. Use absorbent material such as soil, kitty litter, sawdust, or an absorbent clay to soak up the spill. Shovel all contaminated material into a leak proof

container or chemical resistant bag for disposal. The disposal container must bear a label indicating contents. Dispose of material as you would excess pesticides. Do not hose down the area, because this spreads the chemical. Always work carefully and do not hurry. Do not let anyone enter the area until the spill is completely cleaned up.

Special Procedures for Foam Spills

Foam spills act very similar to liquid and if left unattended they break down to the liquid form. Therefore the clean up procedures are very similar. However extra measures may be required.

Outdoors. Try to pick up the foam as quickly as possible before it liquefies. Scoop foam up with a shovel and transfer it to a manhole or place it in large chemical resistant, plastic bags. Empty the foam into a manhole. Triple rinse the bags before disposing them in a landfill. For spills on the pavement, dispose of the foam in a manhole then rinse the area into the manhole. If the spill occurs on soil remove all contaminated soil and place it in sealed containers and dispose of it in accordance with local regulations.

Indoors.- Spills will usually occur in bathrooms, basements or laundry rooms. Evacuate the building if the pungent, rotten egg or sulfur-like odor of metam-sodium is detected. Open exterior doors and windows and ventilate with fans. Seal all heating and air conditioning vents to prevent contaminating the system. Scoop up foam with a shovel or dust pan, and place it in a plastic bag. Seal the plastic bag and remove it from the building. Dispose of foam in the nearest manhole. Triple rinse the plastic bags and dispose of them in a landfill. On hard floors wipe up remaining liquid with rags or other absorbent material and dispose of as directed by local regulations. Wash the floor at least three times with detergent, flushing each down a drain. On rugs and cloth, take them outside, if possible, and dry them before laundering separately. On carpeting use a wet vacuum and flush foam down the drain. Shampoo with detergent at least three times. Ventilate area and allow to dry. If odor persists remove and replace the material.

Major Spills

The cleanup of a major spill may be too difficult for the sewer applicator to handle, or the applicator may not be certain what to do. In either case, keep people away, give first aid if needed, and confine the spill. Call CHEMTREC², the local fire department, and state pesticide authorities for help. If the spill occurs on a highway, have someone call the State or local police for help. Do not leave until responsible help arrives.

Report all major spills by phone to your State pesticide authority. Also you may be required to notify other authorities if:

- # the spill is on a State highway, call the State police or State highway department,
- # the spill is on a county or city road, call the county sheriff or city police, and
- # the spill is on a body of water or waterway, notify the Coast Guard if in coastal waters; the state health department; regional, state, or federal water quality or pollution office and state fish and game/wildlife agency.

²CHEMTREC stands for chemical Transportation Emergency Center, a public service of the Manufacturing Chemicals Association. Its offices are located in Washington, D.C. CHEMTREC provides immediate advice for those at the scene of emergencies. CHEMTREC operates 24 hours a day, seven days a week, to receive calls for emergency assistance. For help in chemical emergencies involving spills, leaks, fire, or explosions, call toll-free 1-800-424-9300. **This number is for emergencies only.**

Phone numbers of these agencies should be maintained in a convenient place before proceeding work with pesticides. County agricultural extension offices can provide these numbers.

Test Your Knowledge

Q. How may pesticide enter your body?

A. Orally, dermally, by inhalation and through the eyes.

Q. Name the three ways pesticides can cause harmful effects.

A. Acute effects, delayed effects, and allergic effects.

Q. If pesticide is splashed into the eyes you should?

A. Immediately flush the eyes with large amounts of water for at least 15 minutes. Hold the eye lids apart to ensure adequate rinsing of the entire eye. Seek medical assistance.

Q. Why is it necessary to wear PPE?

A. PPE is the best way of protecting your body from exposure to a pesticide.

Q. If you must work in a tight area, treated with metam sodium, where considerable gas is evolving, what is the best respiratory protection to wear.

A. Wear either a air supplying respirator or self contained breathing apparatus.

Q. What is a closed handling system?

A. A closed system allows the applicator/handler to remove a pesticide from its original container, rinse the empty container, and transfer the pesticide and rinse solution to a mix tank without contacting the pesticide.

Q. What are good features to have in a pesticide storage room?

A. The storage room should be cool, dry, well ventilated, well lighted and in a secured building that is insulated to prevent freezing or overheating.

Q. What are the major steps for handling a pesticide spill?

A. Control the spill to prevent spilling more pesticide. Confine the spill to keep it from spreading. Clean up the spill by placing it in labeled containers and disposing of the material in an approved manner.

CHAPTER 7

APPLICATION OF METAM-SODIUM ROOT CONTROL PRODUCTS

Learning Objectives

After you complete your study of this unit you should be able to:

- # have a general understanding of foam application equipment,
- # explain the basic foaming techniques,
- # understand the precautions to follow when filling chemical mix tanks,
- # understand the basic concepts of calculation the amount of chemical required for treatment,
- # understand the importance of communicating with treatment plant personnel,
- # calibrate hose retrieval rate, and
- # determine the effectiveness of a root control treatment.

Using the proper application methods and correctly calibrating equipment will assure the most effective use of a chemical. This way the applicator not only minimizes the chemical and operation costs of the root control application but protects the health and safety of the applicator, the environment, the public, and the sewer collection system.

When assessing the various methods of application the applicator must understand the principals of applying chemicals as well as the conditions that exist in the pipe being treated.

General concepts about pipe conditions:

- # Under normal conditions sewer pipes are not filled with water.
- # Pipe sections with sags or depressions may contain more water than other sections. These sections may even be completely filled with water.
- # Solids may build up and fill a portion of the pipe.

General concepts about roots in sewers:

- # Roots enter sanitary sewers through crack joints and other pipe imperfections from the top and sides and not from below the flow line.
- # Roots do not grow into the liquid flow of the pipe. They only sweep the surface.
- # Root growth is most common in the moist atmosphere of the void above the sewer flow line.
- # With but few exceptions, roots cannot grow without oxygen.

General concepts about root control chemicals in sewers:

- # Root masses are excellent collectors of grease and other solids. Such buildups can inhibit the effectiveness of root control chemicals because they cannot contact the root.
- # Chemicals placed in the void area of the pipe with no surface to attach to, such as a root mass, or pipe wall, enter the sewer flow and are transported to the treatment plant.
- # Chemical root treatment kills roots but it does not eliminate blockages. When a root mass is treated the roots may die quickly, however, those roots may take weeks, months, or even several years to decay and leave the system.

General concepts about chemical root control results:

- # It can be very difficult to determine if a root mass is dead with a visual inspection via TV camera.
- # The effectiveness of chemical root control is only as good as the application.
- # Don't expect the "gun barrel" look of a new pipe following a chemical treatment.

The term root control as used in this manual refers to "root management". The entire concept of sewer line root control is to reduce the frequency and size of root intrusions into sewer pipes thus reducing the frequency of sewer stoppages and subsequently, over flows.

Application Equipment

Equipment design and specific components of foam generating and application equipment may vary but the basic principal of operation is the same, namely:

- # The chemical and wetting/foaming agent is diluted with water as per chemical manufacturer's label instructions.

One type of equipment utilizes a mix tank (30 to 300 gallon) in which the chemical ingredients are diluted with water. This mix tank is usually trailer mounted. The trailer is then used to transport the chemical to the various applications sites throughout the municipality. One 200 gallon tank mix is sufficient to treat approximately 1600 feet of 8" pipe. The chemical/water solution is delivered under pressure (100 - 150 psi) to a foam production chamber. A positive displacement pump is then used to pump the chemical/water solution.


A second type of equipment utilizes a small (3 to 6 gallon) chemical tank in which the chemical ingredients are mixed but, water is not added. This unit utilizes a positive displacement roller pump or else the pump on a hydrojetter unit to deliver water (without chemical) under pressure (100 - 150 psi) to a venturi at which point the chemical is introduced into the water stream and mixed just ahead of the foam production chamber. The chemical is then diluted with water during the application process. The chemical/water dilution ratio is based on the products' concentration of active ingredients which can be found on the product label.

- # Ten to fifteen CFM (80 - 140 psi) of air from a compressor is combined with the water/chemical solution in the foam production chamber producing the desired foam.
- # Foam is delivered to the interior of the pipe being treated through hoses varying in size of 3/4 to 1-1/4" and means.

Foaming Techniques for Applying Metam-Sodium Root Control Chemicals

Hose Insertion Method

The hose insertion method is the most common and lowest risk method of foam application. A foam delivery hose is inserted through a section of pipe to be treated. Foam is then pumped from a foam generator through the hose as it is being retracted at a predetermined rate. The foam delivery hose may require an external mechanism such as a hydrojetter or rodding-machine to convey the hose through the pipe prior to the foaming process. This procedure utilizes a two stage nozzle and foam generation equipment adapted to a standard high pressure hydro jetter. The two stage nozzle allows the hydrojetter to "jet" through the pipe to be treated then when the pressure drops the large portion of the nozzle opens to allow the unrestricted flow of foam to be pumped out. See Figure 6.

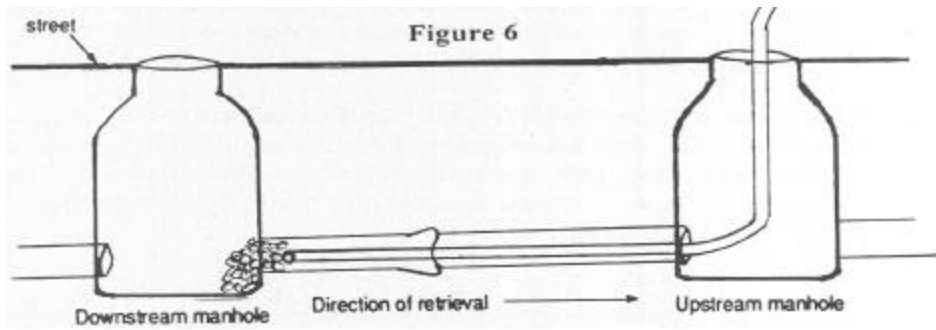

The insertion manhole may be upstream or downstream however, whenever possible, use the upstream manhole for insertion as this avoids drift towards the applicator. Once the hose reaches the other manhole, start the equipment and wait for foam to appear. Retrieve the discharge hose at the desired rate. With jetters it is recommended that moderate pressures be used when inserting the hose into the pipe. High pressures and excessive cleaning may result in excessive root damage which can affect the effectiveness of the root control application.

Hose Insertion Method, Split Treatments

In some cases, the sewer stretch may be longer than the amount of discharge hose, or it may not be possible to get the discharge hose completely through the sewer. In this case, it may be necessary to use two set-ups to treat a section. With this technique, treat the downstream portion first, as this reduces drift towards the applicator and lowers exposure of the applicator to chemical.

Hose Insertion Method: "Pushing a Slug"

Foam will penetrate a distance beyond the discharge nozzle. This is known as "pushing a slug". If, for instance, masses of roots or physical obstructions do not permit the hose to be conveyed completely through the sewer, the equipment may be "allowed to pump" at a fixed location, until the foam works its way through the obstruction. The equipment is then set up at the opposite manhole, and the procedure is repeated until the two "slugs" from the two set-ups overlap.


EXTREME CAUTION: Extreme caution should be employed when using this method as foam may travel farther than desired up service laterals. Foam will always take the path of least resistance, which may be up a cellar floor drain or through outside building clean-outs.

Hose Insertion Method: "Pulling the Water Out"

In some cases sewer pipe may have inadequate slope or swales in which water collects. As the foam is injected it displaces the water in the pipe. Under these conditions it is often advisable to treat using the downstream manhole as the insertion manhole. As the hose is retrieved excess water is pulled toward the insertion manhole. If the upstream manhole is used as the insertion manhole, then water may pond in the upstream manhole. If this happens, equipment must then be shut down until water recedes.

Hose Insertion Method: Treating "Wye" Connections from the Main


Often it is desirable to treat service connections from the main. This provides an important side benefit to homeowners. Generally treating service connections from the main is only feasible in small diameter (6" through 10") pipe. In large diameter pipe it is not possible to build up the pressures needed to penetrate service connections. See Figure 7.

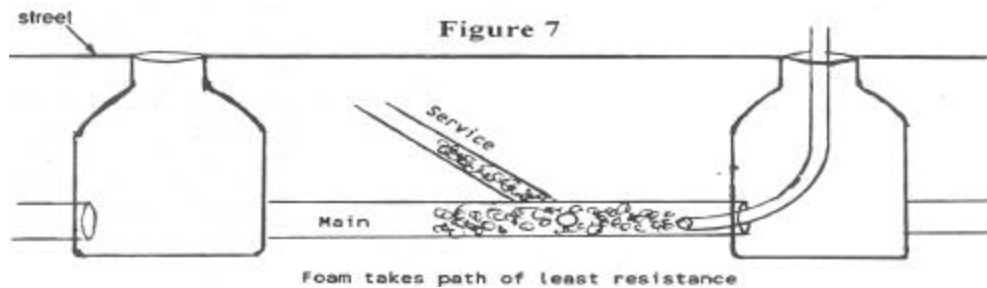

Additional foam is required per foot to use this method. Calculate the amount of additional foam required for the given number and pipe size of building laterals, and vary retrieval rates accordingly. **USE EXTREME CAUTION** to prevent foam from reaching building drains or outside sewer cleanouts.

Surface Coating Large Diameter Pipe

When treating large diameter pipe it is often impossible, or too costly, to completely fill the sewer with foam. Only that chemical which contacts roots is useful. Excess chemical that drifts downstream is wasted and could affect the wastewater treatment plant. To coat the pipe surface an elevated nozzle (Figure 8) is pulled through the sewer. Foam is ejected through the nozzle above the flow where it contacts and sticks to pipe surfaces. It is very important that the nozzle be elevated above the flow. If the foam is ejected into the flow it will not contact pipe surfaces. To calculate the volume of foam required to coat the surface, contact your chemical supplier for instructions.

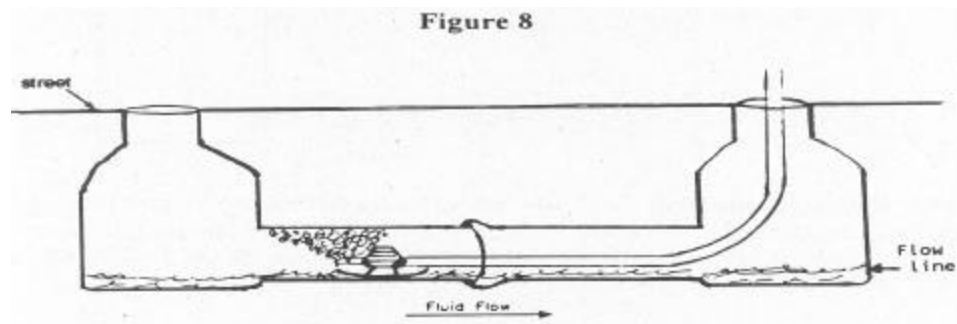

Surface coating often does not yield the results obtained by filling the pipe, since the foam is not under pressure and will not penetrate root masses as effectively as it would when filling the pipe. Repeat treatments may be necessary as succeeding "layers" of root tissue are killed off. Also, surface coating will not result in foam penetrating service connections. Surface coating is also used on small diameter pipe with heavy flow where the flow rates preclude filling the pipe with foam.

Spot Treatments


Spot treatments may be used with either foam filling techniques or surface coating techniques. Spot treatments involve treating only where the roots are. The advantage of spot treatments is that less material is required to treat a given length of sewer pipe. The disadvantage is that it is first necessary to know exactly where the roots are which requires television inspection. If the TV inspection is dated additional root penetration may have occurred. Additionally, initial root penetrations frequently are unnoticed or missed by TV inspection. Spot treatments are most useful in large diameter lines where the increased cost of material offsets the cost of TV inspection. The

amount of chemical which can be saved on small diameter pipe is usually negligible and not worth the cost of TV inspection.

When using spot treatment techniques, allow a certain amount of "overlap on each side of the root masses, approximately 10 feet to each side of the root intrusion.

"Pushing" Foam Through Inflatable Plugs

In some cases it may be desirable to "push" the foam through inflatable, hose-through plugs (figure 9). These plugs are available through plug vendors in the sewer industry. Insert the plug at one end of the line with the hose running through it. Inflate the plug and inject foam in a volume required to fill the pipe or until foam appears at the opposite manhole.

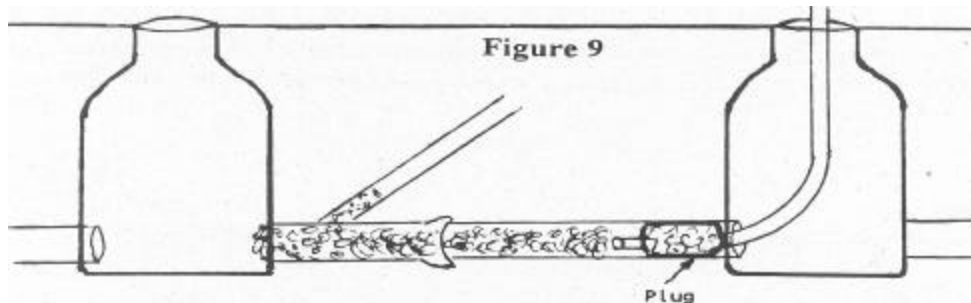

CAUTION: This is a high risk method. When using this method there is a significant hazard of foam backing into buildings, because foam will always follow the path of least resistance. This method should only be used where there are no service connections on the main-line sewer or where buildings are set far back from the main.

Treating Building Sewers

Treating house lines also involves the use of hose-through inflatable plugs. Some equipment manufacturers have developed specialized, portable equipment for treating building sewers.

Insert the hose-through plug in a cleanout which is downstream from all other cleanouts and fixtures. If there are cleanouts or fixtures downstream from the insertion cleanout, they must be plugged. Calculate the volume of foam necessary to treat the given distance of building sewer. Turn on the equipment until the desired quantity of foam has been pumped.

Treating house lines should only be attempted by applicators familiar with the design of building sewer systems or under the supervision of a licensed plumber. Improper application may result in foam being discharged into houses. **Building occupants should be advised to exit a structure, until the building is ventilated,** if a rotten egg or sulfur-like odor of metam-sodium is detected.


Filling Chemical Mix Tanks

When using chemical mix tanks certain precautions must be followed. Applicators often fill mix tanks from fire hydrants, garden hoses, or other fresh water sources. If there is a pressure drop in the water distribution system the solution in the mix tank could back-siphon into the fresh water system, contaminating the entire fresh water distribution system. Also, this could happen when drawing water from any other source, such as a farm pond. Whenever a tank is being filled with water it should never be left unattended. Back-siphoning can be prevented with one of the following measures:

- # use an air-gap,
- # use back flow prevention device such as a double check valve, or

use an intermediate water source, such as a jetter.

An air gap is shown in Figure 10

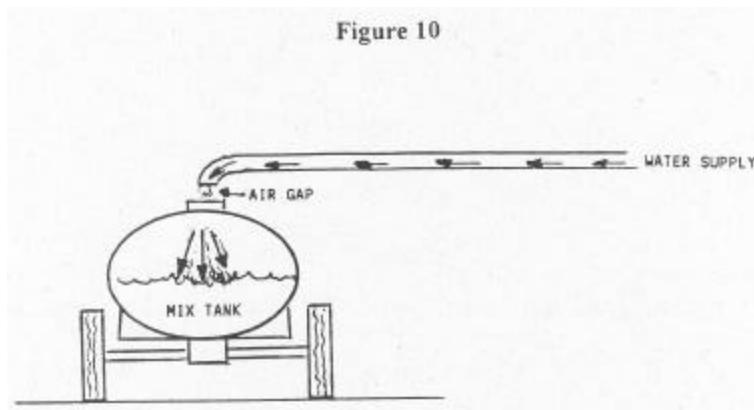

For an air-gap to be effective, the distance between the inlet line and the tank (d) must be at least twice the diameter of the inlet line (D). In the event of a reversal of pressure, air will rush through the air-gap, preventing siphoning. It is difficult to use an air gap with foaming root control chemicals, as the residual material in the tank will foam and prevent the tank from being filled.


Back flow preventer

This is a device that is connected between the water source and filling hose. If the pressure on the outlet side of a reduced pressure zone (RPZ) ever exceeds the pressure on the inlet side, relief valves discharge onto the ground, preventing back-siphoning. (For a more complete technical description of how a RPZ device works consult a manufacturer.)

Double check valves are mechanical devices that prevent backflow.

Filling from an intermediate source. It is often useful to fill mix tanks from an intermediate source, such as a sewer jetter. In these cases, of course, the sewer jetter must itself be filled using an air-gap or double check valve. The advantage is that in the event of back-siphoning from the mix tank into the intermediary source there is no danger of contaminating fresh water supplies. See Figure 11.

Obtaining water from a jet truck will also prevent back siphoning because the truck has built-in siphoning brakes.

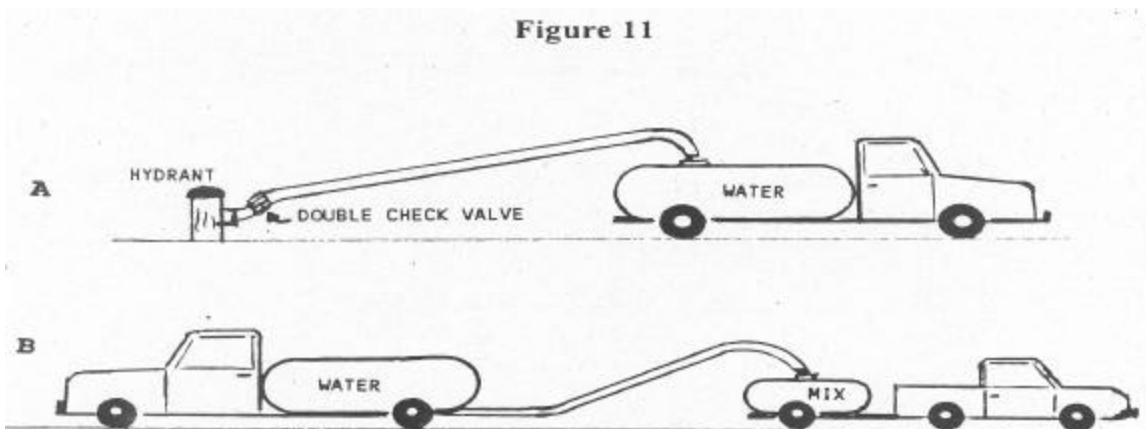

When mixing metam-sodium with water remember that metam-sodium decomposes to the more volatile and toxic MITC. This process starts immediately and proceeds rather rapidly. Therefore, plan to use the solution soon after mixing, otherwise the material will be ineffective.

Calculating Amount of Chemical Required

The applicator can use the worksheets in Figures 12 and 13 to calculate the amount of chemical required for a specific job. Figure 12 is the calculation for the *foam fill* method. In larger pipe the foam/chemical is directed toward the pipe walls rather than filling the whole pipe. The *foam spray* method (figure 13) requires less chemical thus protecting the system from injecting too much chemical at one time. When using these figures the applicator needs to add to the formula: 1) the number of feet of each pipe size that will be treated and, 2) the dilution ratio.

To determine the dilution ratios the applicator should refer to the label of the product being used. For example, if the product label states "mix 25 parts water to 1 part of chemical" then insert "26" (26 parts of chemical/water solution) in the "dilution ratio required" column of either figure 12 or 13 and complete the calculation.

FOAM FILL APPLICATION										
Pipe Size	Gallons per/foot	Length of Pipe	Gallons of Foam	Service Laterals 15 - 25%	Total Foam Required	Expansion Ratio 1:20 Required	Chem/Water Solution	Dilution Ratio Required	Total CMG	Round Up
4"	0.7	x	=	+	=	÷ 20	+	÷	=	
6"	1.5	x	=	+	=	÷ 20	+	÷	=	
8"	2.5	x	=	+	=	÷ 20	+	÷	=	
10"	4.0	x	=	+	=	÷ 20	+	÷	=	
12"	6.0	x	=	+	=	÷ 20	+	÷	=	

Figure 12

FOAM SPRAY APPLICATION

Pipe Size	Gallons per/foot	Length of Pipe	Gallons of Foam	Service Laterals 15 - 25%	Total Foam Required	Expansion Ratio 1:15 Required	Chem/Water Solution	Dilution Ratio Required	Total CMG	Round Up
12-14"	3.0	x	=	+	=	+ 15	+	+	=	
15-16"	3.5	x	=	+	=	+ 15	+	+	=	
18"	4.3	x	=	+	=	+ 15	+	+	=	
20"	4.5	x	=	+	=	+ 15	+	+	=	
21"	4.75	x	=	+	=	+ 15	+	+	=	
22"	5.0	x	=	+	=	+ 15	+	+	=	
24"	5.5	x	=	+	=	+ 15	+	+	=	
26"	6.0	x	=	+	=	+ 15	+	+	=	
27"	6.75	x	=	+	=	+ 15	+	+	=	

Figure 13

Application Check-List

This check list should be reviewed before applying root control chemicals containing metam-sodium to a sewer section. (This list is adapted, in part, from a product label under sections labeled "USE PRECAUTION"- **READ THE PRODUCT LABEL COMPLETELY PRIOR TO APPLICATION.**)

1. Read the chemical product label thoroughly.
2. Notify the wastewater treatment plant operator and workers of treatment site and date.
3. Know the distances between buildings and the sewer.
4. Know the depth of the sewer compared to the drains in the buildings.
5. Are there any obstructions in the line?
6. Are there broken or empty traps?
7. Are there drains without traps that would allow easy emergence of foam? (Building drains may be plugged to protect against back up and flooding.)
8. Product labels and Material Safety Data Sheets should be available at job site for quick reference.
9. Provide job site with all necessary equipment for proper traffic control (i.e., barricades, cones).
10. Provide the job site with proper equipment for safely opening manholes.
11. Provide the job site with proper equipment for conforming with OSHA standards, for confined space entry (including but not limited to air monitor, harness, and retrieval systems).
12. Have the proper PPE available:
 - # gauntlet type chemical resistant gloves,
 - # rubber boots,
 - # chemical resistant, full length, plastic or rubber apron,
 - # respirator and goggles or a full face respirator with cartridges approved for pesticide use, and if required air supplied respirator or SCBA,
 - # long pants and long sleeved shirts, and
 - # hard hat

Communication with the wastewater treatment plant personnel.

Coordination and cooperation with plant operations is very important. Notification prior to treatment is a definite priority, especially with the pre-treatment program, which may require issuance of a discharge permit. Treatment plant personnel should be made aware of any unusual side effects of metam-sodium such as H₂S.

The applicator should obtain as much information about the treatment area as possible. For example, the times of high flows, the size of the sewer lines being chemically treated and the distance of the sewer line from the nearest lift station and sewage treatment plant. These are important determinants of the effects of chemical root control on a wastewater treatment plant processes. Sewer line size is an important consideration because of the amount of material required to chemically treat them. Depending on the application method used, it can take up to 9 times as much chemical per foot to treat a 24" sewer as an 8" sewer.

Dosage of Product to a Particular System

In order to minimize the effects of root control chemicals on a sewer system it may be necessary for the applicator to reduce the volume of material to be applied. Knowing the volume and hourly flows for the system and the manufacturer's recommended maximum concentrations, the applicator can determine the maximum amount of product that can be injected into the system for any given day or hour.

If adverse effects are indicated at the treatment plant, i.e., the rotten-egg odor of metam-sodium is detected, or beginning of biological upset, the application process should be immediately discontinued. When applications are re-started the applicator should use reduced application rates, namely fewer total gallons of concentrate per hour or day. The treatment plant operators should continue to monitor the plant to insure against a reoccurrence of adverse effects.

Metam-Sodium Root Control Application

The three phases of applying the metam-sodium root control chemicals are 1) mixing the chemicals or the chemical/water solution, 2) calibrating a 1 part chemical/water solution to 20 parts foam, and 3) calibrating the hose retrieval rate.

Mixing the Chemical

Due to the differences in packaged products, specific mixing instructions must be obtained from the label of the metam-sodium root control products being applied. Mixing instructions must also be obtained from the equipment manufacturer for the specific application equipment being used.

The active ingredients, metam-sodium and dichlobenil, can only be used in combination with each other and with a foaming agent, as per the product label. Depending on the equipment being used the ingredients may be mixed with the proper amount of water in a mixing tank or may be mixed only with themselves in a small chemical tank to be automatically mixed with water at the moment of application.

The ingredient, dichlobenil, should be mixed with the other root control ingredients vigorously before mixing with water. The mixed solution should not be allowed to stand as mild agitation is necessary to keep the dichlobenil in suspension.

The chemical mixture should be used promptly after mixing and the applicator should not mix more solution than can be used in one day. To mix the proper amount of needed solution the applicator must, 1) determine the method of treatment, 2) determine the total footage of pipe by pipe diameter

and method of treatment, and 3) calculate the chemical mix ratio and the amount of chemical/water solution to prepare depending on the pipe diameter and method of application.

Methods of treatment include the foam fill and foam spray. Pipe diameters 12" - 14" or less require filling the entire pipe void with foam (Foam Fill). Pipe diameters 12" - 14" or larger are more economically treated by surface coating on the root masses and pipe surface (Foam Spray). Other factors may dictate the method of application e.g., wastewater level, velocity of flow and root density.

Calibrating Foam/Solution Expansion Ratio

The applicator should know how to calibrate the application equipment to get the proper consistency and volume. This section provides general guidelines for equipment and foam calibration. Consult with the equipment manufacturer for more specific calibration details of their equipment.

Metam-sodium root control products require a foam application. The ingredients are mixed with water, according to the package instruction, and then air is introduced with an air compressor. Foam quality, the proper chemical/water to foam expansion ratio, is an important factor in achieving a successful root control application. The proper expansion ratio is that 1-part, or 1-gallon, chemical/water solution will expand to 20 parts, or gallons, of chemical/foam solution.

The proper foam will be dense, have small bubbles, "cling" to the pipe surfaces, maintain its shape for a specified period of time, and contain the proper concentration of active ingredient per cubic foot of foam.

An expansion ratio less than 1:20 produces a "wetter" foam. A wet foam will be "runny" and not stick to pipe surfaces. It will also be "heavy" and quickly collapse, not holding its shape in the pipe. Additionally, wet foams will not fill pipe volumes at normal retrieval rates, or penetrate wye connections.

An expansion ratio greater than 1:20 produces a "drier" foam, with large bubbles and not carry a sufficient concentration of active ingredient per cubic foot to be active on tree roots. Variations in foam quality can be made by adjusting the water/chemical solution volume (gallons per minute (gpm)) versus the air volume (cubic feet/minute (CFM)). Follow the equipment manufacturers guidelines to make these adjustments.

The water quality, i.e., hardness may effect foam quality. If this is a problem check with the chemical manufacturer or supplier for technical assistance.

A simple test of the quality of foam is for the applicator to observe the foam discharging unobstructed from the hose into a manhole. A good foam is when the stream breaks into light balls and flakes of foam about 2 - 3 feet from the point of discharge.

These tests for foam quality or equipment calibrations, can be performed at a testing site by using the appropriate amount of wetting/foaming agent only; without adding the products' active ingredients. This reduces the risk of exposure for the operators performing the test. The wetting/foaming agents can readily be obtained from the product manufacturer. Contact the equipment manufacturer for detailed calibration procedures specific to their respective equipment.

To measure the foam more accurately from the mound of created foam fill a 2000 ml graduated cylinder to the top. Once filled place the cylinder in a location free of wind (wind causes unnecessary breakdown of the foam). When the foam has settled a liquid remains. The desired result is to have the remaining liquid measure 100 ml or 1/20th of the foam volume.

Each piece of equipment should be calibrated separately to determine its proper flow rate. If a piece of equipment shows wide variances in foam consistency, there may be a problem with the equipment. Service the equipment per the equipment manufacturer's recommendations.

Calibrating the Hose Retrieval Rate

To determine the hose retrieval rate the operator must know:

- 1) the gallons of foam required per foot of sewer pipe, and
- 2) the amount of gallons per minute that the application equipment is producing.

Then divide the amount of foam produced per minute by the amount of foam required per foot to determine the hose retrieval rate in feet per minute.

Figure 14 provides a quick method of determining retrieval rates.

Figure 14

<u>Pipe Size</u>	<u>Foam Fill gal/ft</u>	<u>Feet per minute</u>
4"	0.7	143
6"	1.5	67
8"	2.5	40
10"	4.0	25
12"	6.0	17

This same procedure can be used when using surface coating techniques. For example: to surface coat a 24" pipe carrying 7" of flow, with 3" of foam for 300 feet in length it requires 2,221 gallons of foam. This breaks down to 7.4 gallons of foam per foot. If the equipment is generating 90 gallons of foam per minute then the proper hose retrieval rate would be 12.16 feet per minute (90 ÷ 7.4).

To Calculate Pipe Volume


Calculating the correct volume of a pipe to be treated is important. If pipe volume is over estimated too much foam could be pumped into the line and forced up building laterals and into the buildings. An underestimation could result in a bad application. The following conversion table may help in your calculations:

Figure 15

Conversion Table

<u>Multiply</u>	<u>By</u>	<u>To Obtain</u>
# of cubic feet	1728	#of cubic inches
# of cubic feet	7.481	# of gallons
# of gallons	0.1337	# of cubic feet
# of gallon	231	# cubic inches

A pipe is a cylinder open on both ends. The calculation for volume of a pipe (cylinder), is the area of the circle (cross section of the pipe) x length of the pipe. The area of a circle is the radius (1/2 the diameter) times the radius times 3.14.

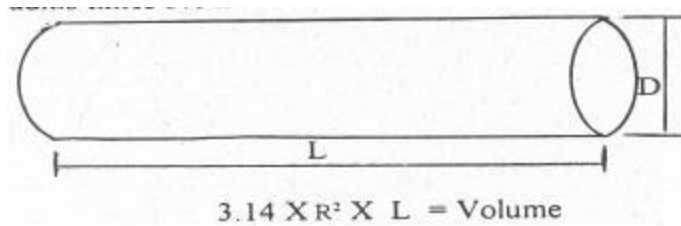

Example: Find the volume of foam required to treat a pipe 10 inches diameter and 400 feet long.

Answer: 1). Find the area of the circle. Area = Radius X Radius X 3.14
(Radius = 1/2 Diameter) $5" \times 5" \times 3.14 = 78.5 \text{ Inches}^2$


2). Convert Square inches to square feet:
Divide square inches by 144 ($144 \text{ in.}^2 = 1\text{ft}^2$).
 $78.5 \div 144 = .545\text{ft}^2$

3). Pipe Volume = $.545\text{ft}^2 \times 400\text{ft} = 218\text{ft}^3$

4). Volume of foam in gallons required. Refer to the conversion table, figure 15.
 $218\text{ft}^3 \times 7.481 = 1630.85 \text{ gallons}$
round to 1631 gallons

If a pipe is partially full of water, the water also takes up volume. The applicator should be able to compensate for the reduced volume. Roots do not grow below the water level and chemicals are not effective when diluted in sewer flows. Proper application requires that the foam be discharged above the flow line. Under certain field conditions where a pipe has slow moving flow the applicator should compensate for the volume displaced by the water in order to avoid overcharging the pipe.

Figure 16: "D" is the diameter of the pipe and "d" is the depth of the flow. The wetted perimeter is that portion of the circumference submerged with water and the dry perimeter is the portion of the circumference above the water line.

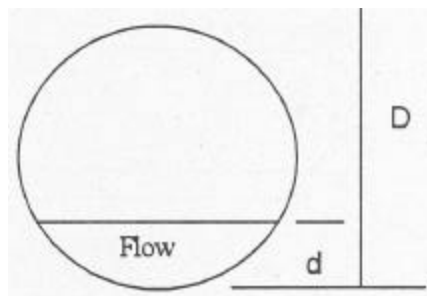

By comparing the wetted perimeter of the pipe to the entire perimeter (circumference) the applicator can determine the percent by volume of the pipe filled with water.

The relationship between d/D and the wetted perimeter is illustrated in the chart below:

Wetted perimeter

<u>d/D</u>	<u>% of Circumference</u>
0.1	20%
0.2	30%
0.3	37%
0.4	44%
0.5	50%
0.6	56%
0.7	63%
0.8	70%
0.9	80%
1.0	100%

Determining Effectiveness of Root Control Treatments

Determining the effectiveness of chemical root control treatments is an important issue for contractors and public works officials. The results of chemical root control are sometimes difficult to assess because they can not be seen by the naked eye.

Tracking results can also be a learning tool for the applicator as well as the public works director by pointing out deficiencies in application methods.

Conditions which may influence effectiveness include:

- # Improper application techniques, in particular, poor contact and exposure time,
- # High sewer flows or surcharging conditions soon after application,
- # Severe hydraulic sewer cleaning before or after treatment,
- # Heavy grease deposits which interfere with chemical contact, and
- # Old or ineffective chemical, or improperly mixed chemical.

Due to the remoteness of root masses in sewer pipes it is extremely difficult to accurately assess the percentage of the root kill. An important fact to remember is that treating roots with chemicals kills the roots, however, these treatments do not make the roots disappear. A complex of decaying organisms is constantly present in the sewer, feeding on the dead roots. In addition, the build up of solids and ever constant pressure caused by wastewater flows breaks the dead roots off, sending them to the treatment plant. This process may take weeks, months, or even years.

NOTE: If a sewer line is experiencing frequent blockage problems chemically treating roots will not immediately eliminate these blockages. You need to address these blockages with a good cleaning, preferably with a high pressure jetter. Once the blockage problem is resolved the long term solution of chemically treating roots can be addressed.

As discussed previously, in the section on how roots grow, root masses are made up of a central trunk dividing into a series of smaller and smaller branches, ending as microscopic hair roots. A specific root mass in a pipe may be the result of single rootlets entering the pipe through a faulty pipe joint. This then grows and divides into more rootlets which in turn divide and grow forming

a "root mass". As the root mass grows the supporting branch (the original root hair entering the pipe) grows in size and is frequently protected by the surrounding root mass.

The most difficult part of a successful chemical root treatment is determining with any degree of accuracy the percent kill of a specific root mass or root masses in a specific section of pipe. When viewing the root masses insitu (in place in the pipe) with the use of closed circuit TV., a live root mass looks brown and dirty and due to equipment lighting the root masses tend to reflect light causing glare and "hot spots". The same closed circuit TV. of a dead root mass also looks brown and dirty with glare and hot spots. The insitu inspection becomes a case of judgment on the part of the inspector. With time the root mass becomes smaller due to decay and breakage. The contents of a dead root mass becomes soft or brittle and break off easily as the camera passes. These factors all become part of the assessment of the success of a specific chemical root control treatment. The confidence level of these judgment calls can be significantly increased by removing a root mass from the pipe for a detailed visual inspection.

Like the trees above ground, roots grow in diameter by adding cells between the dead tissue in the root center and the dead bark (skin) on the outside. These healthy living cells create a light colored almost white layer under the bark. When a root is killed this layer turns brown. By stripping the bark layer off the individual roots in a root mass the effectiveness of a specific chemical treatment can be determined. When performing this visual test you need to remember that you are examining only one of perhaps hundreds of root masses from the specific section(s) of treated line. Due to non standardized conditions in a sewer system what you find in one root mass may not be what you find in the next.

Perhaps the most reliable method of judging the success of a chemical root control program is to determine the rate of reduction in sewer stoppages, overflows, emergency calls, and other root-related sewer problems. If a municipality experiences, say, 100 stoppages per year in the year prior to implementation of a chemical program, and 2 stoppages per year the year following implementation of the program, the program has shown positive results. The program could be justified by weighing the cost of the root control program against the cost of relieving stoppages, damage caused by stoppages.

Although the ultimate goal of a root control program is to totally eliminate all root masses, in reality a successful program is one in which the roots are managed at a level below which the cost and risk of application is less than the cost and risks of unwanted sewer blockages and damaged pipe.

Note: The application of foam into sewer pipes involves the use of various conversion tables. To use these tables the certified applicators must be capable of calculating volumes and perform basic mathematical functions such as multiplication, division and use of percentages.

Test Your Knowledge

- Q. Briefly describe two types of foaming equipment.
- A. 1) utilizes a 30 - 300 gallon mix tank in which chemical and water are mixed. The solution is delivered under pressure to a foam production chamber then pumped out as a chemical-foam.
2) utilizes a small (3-6 gallon) tank into which only chemical is mixed. The chemical is pumped under pressure to an venturi where it is introduced into the water stream and into a foam chamber. Foam is then pumped out as in 1) above.
- Q. Name the foaming techniques used for applying metam-sodium root control chemicals.
- A. Hose insertion method, Split hose insertion method, hose insertion - "pushing a slug", hose insertion "pulling the water out", hose insertion "treating wye connections", surface coating large diameter pipe, spot treatments, and pushing foam through inflatable plugs.
- Q. When filling a mix tank how can you prevent back-siphoning.
- A. By, using an air gap between hose and tank, by using a back flow preventer or double check valve, or by using an intermediate water source, such as a jetter.
- Q. How can an applicator calculate the amount of chemical required for a specific job?
- A. Determine if the foam fill or foam spray method will be used. Select the appropriate chart for that method. Then refer to the product's label to determine the amount of water to mix with 1-part of chemical. This total will be used in the "dilution Ratio Required " column to complete the calculation.
- Q. Why is it necessary for the certified applicator to communicate with treatment plant personnel?
- A. First to alert personnel that a chemical will be introduced into their system so they may monitor for signs of upset and any unusual side effects from the chemical. Also, it may be necessary for the pretreatment program to obtain a discharge permit. Second, the applicator should obtain information about times of high flow, sizes of pipe to be treated, and distances between different sewer structures such as lift stations and treatment plant.
- Q. How do you calibrate the hose retrieval rate?
- A. Determine the gallons of foam required per foot of sewer pipe. Next, determine the gallons per minute that the application equipment produces. Then divide the amount of foam produced per minute by the foam required per foot to determine hose retrieval in feet per minute. A chart is also available to assist the applicator.
- Q. How can the applicator determine the effectiveness of root control treatments.
- A. This is not easy. Several methods must be used. Television is useful. Pulling treated root masses and inspecting them for live tissue. Compare the rate of sewer stoppages before and after treatment.

GLOSSARY

Activated Charcoal: Finely ground or granulated charcoal which adsorbs chemicals.

Active Ingredient: The chemical or chemicals in a product responsible for pesticidal activity.

Acute Oral Toxicity: Injury produced from a single exposure.

Acute Toxicity: The short-term, single exposure effects of pesticide.

Adherence: The ability of a pesticide or substance to stick to a surface.

Adjuvant: A substance added to a pesticide to improve its effectiveness or safety. Same as additive. Examples: penetrants, spreader-stickers and wetting agents.

Adsorption: The process where chemicals are held or bound to a surface by physical or chemical attraction. Clay, charcoal, and high organic soils adsorb pesticides.

Agitation: Process of stirring a pesticide solution so as to keep wettable powders, etc. in suspension.

Anti-Siphoning Device: A mechanism used to prevent the flow of a pesticide solution from a mix tank to a water source.

Back-Flow Preventor: see "Anti-Siphoning Device."

Bactericide: A pesticide that destroys or prevents the growth of bacteria.

Basal Application: Application of a pesticide to plant stems or tree trunks just above the ground line.

Building Sewer: That portion of a sewer system which lies between the building foundation and the collector sewer. Also called lateral sewer.

Bypass Pumping: The process of temporary re-routing sewer flows around a given section of sewer.

Calibration: The process of adjusting application equipment so that pesticides are applied at the proper rate. Also, the process of determining the rate at which a given piece of application equipment discharges pesticides.

Carrier: An inert ingredient used to dilute a mixture of pesticides, or to transport a pesticide to target.

Chemical Name: The scientific name for a chemical substance. Example: Sodium Methylthiocarbamate is the chemical name for metham.

CHEMTREC: The Chemical Transportation Emergency Center. This organization operates a 24-hour information hot-line for pesticide spills, fires, and accidents. 1-800-424-9300.

Chronic Toxicity: The long-term effects of exposure to a pesticide.

Collector Sewer: A sewer, typically small diameter, which collects wastewater flows from buildings and transports those flows to an interceptor sewer.

Combined Sewer: A sewer which is designed to carry both sanitary flows and storm water, either all or part of the time.

Combined Sewer Overflow: see Overflow.

Commercial Applicator: One who applies pesticides for hire. Many states require commercial applicators to also be certified applicators, regardless of the type of pesticide applied.

Common Name: A generic name given to an active ingredient that is generally accepted in pesticide nomenclature. Distinguished from chemical name or brand name. Examples: Metham, Dichlobenil, Copper Sulfate.

Compatibility: The ability of two pesticides or substances to mix without reducing the effectiveness or usefulness of either substance.

Contact Herbicide: A chemical that kills primarily by contact with plant tissue, with little or no translocation.

Decomposition/Degradation: The process by which a chemical substance is broken down into simpler substances. This process can take place through chemical, biological, or physical means.

Deposit: The amount of pesticide left on a treated surface (noun). Also, the process of leaving a pesticide on a treated surface (verb).

Dermal Exposure: The absorption of a pesticide through the skin, eyes, or mucous membranes.

Dermal Toxicity: The ability of a pesticide to cause injury to a human or animal when absorbed through the skin.

Dessicant: A chemical that promotes drying or loss of moisture from plants and animals such as insects.

Detoxify: The ability of a substance or process to render a pesticide harmless.

Dust: A dry mixture containing pesticide(s) and inert ingredients.

Easement: In sewer work, the location of a sewer line in back-yards, parks, public lands, off-road, or other areas which are typically more difficult to access than sewers located beneath street surfaces. Also, the right of government to access manholes and sewer lines which are located on private property.

Effluent: Water which is leaving a structure. Example: the discharge from a water treatment plant.

Engineer: In sewer work, the designated official of a municipality who represents and is authorized to act on behalf of a municipality with respect to the municipality's dealings with a contractor.

Exfiltration: The leakage of water or other substances from a sewer pipe into the ground through joints, cracks, or defects.

EPA: The Environmental Protection Agency, the federal agency responsible for regulating and enforcing the registration, sale and use of pesticides.

EPA Registration Number: The number assigned to a pesticide by the EPA. This number must appear on all pesticide labels.

FIFRA: The Federal Insecticide, Fungicide, and Rodenticide Act. Most important legislation concerning pesticide usage.

Foaming Agent: An adjuvant used to convert a pesticide solution into a thick foam. Used in agriculture to prevent drift; in sewer line root control as a carrier and to prevent drift.

Foam Retardant: An adjuvant used to prevent foaming of a pesticide mixture.

Formulation: A mixture of pesticide(s) and inert ingredients. The pesticide product as purchased.

French Drain: A perforated or porous conduit used to remove groundwater from an area and convey it downstream.

Fumigants: Pesticides which form a vapor or gas, usually in a confined space or enclosed area, that are toxic when absorbed or inhaled.

Fungicide: A pesticide that kills or controls fungi.

General Use Pesticide: A pesticide which can be purchased and used by the general public. (see Restricted Use Pesticide).

Germicide: A pesticide that kills or controls pathogenic (disease carrying) bacteria.

GPM: Gallons per minute.

Groundwater: Water beneath the earth's surface that is the source of wells.

Grouting: The process of sealing pipe joints or other open sewer defects against groundwater infiltration.

Herbicide: A pesticide used to control or kill undesirable plants.

Incompatible: Two pesticides or substances that cannot be mixed together without adversely effecting their usefulness.

Inert Ingredients: A material that has no pesticidal effect, but which is contained in a pesticide formulation. See "adjuvant."

Infiltration: Ground water which enters sewer systems through joints or other defects.

Infiltration/Inflow Control (I/I): In general, the process of abating or controlling the introduction of extraneous water in a sewer system. Examples: grouting, re-lining, manhole rehabilitation, etc.

Inflow: Distinguished from infiltration, extraneous water other than groundwater that enters a sewer system. Examples: surface water which enters through manhole covers, water coming from roof leaders and foundation drains.

Inhalation: Exposure to a pesticide by breathing it in.

Influent: Water that is entering a structure. Example: sanitary sewer flows entering a wastewater treatment plant.

Inspector: A representative of the Owner or municipality who is actually on the job site supervising the quality of workmanship and materials.

Interceptor Sewer: Typically a large diameter sewer without service connections, which receives flows from collector sewers and transports the flows to a wastewater treatment plant.

Invert: The lowest point of a pipeline or conduit. The bottom part of a manhole that is rounded to conform to the shape of the sewer line.

Joints: The connection between two contiguous pieces of sewer pipe.

Lateral Sewer: Same as building sewer.

Leaching: The movement of a pesticide through soil by the movement of water.

Lineal Feet: A measurement of distance, in a straight line, between two contiguous manholes in a sewer system.

LD₅₀: The average lethal dose of a given pesticide for a given species. The amount that will theoretically kill 50% of a test group. Usually expressed in parts per million.

Manhole Section: Same as Sewer Section.

MGD: Millions of gallons per day. Used to express the design flow capacity, or actual flow, of a wastewater treatment facility.

Nematicide: A pesticide used to kill or control nematodes.

Nematode: Microscopic, colorless, worm-like animals that live as saprophytes or parasites. Many cause diseases of plants and animals.

Non-Systemic: A pesticide, usually a contact pesticide, which has a localized pesticidal effect only on the part of the plant or animal actually not transported through the plant or animal system in pesticidal concentrations.

Nonselective: A pesticide which kills or controls any living thing, or which is toxic to a wide range of organisms.

Oral toxicity: The occurrence of injury when a pesticide is taken by mouth.

Overflow: An undesirable discharge of sanitary or combined sewer flow into a river, stream, or other surface waters.

Owner: In sewer work, the municipality or public agency that maintains public sewers.

Parts per million (ppm): A typical measure of the concentration of a pesticide in another substance, or pesticide residues. One gallon of active ingredient in 1,000,000 gallons of water which represent 1 part per million.

Persistence: The ability of a pesticide to resist chemical or biological degradation, and therefore remains in the environment for an extended period of time. Persistent Herbicide.

Pesticide: Any chemical that will kill, repel, or otherwise control an unwanted plant, animal, fish, bird, insect, or microorganism.

Phytotoxic: The deleterious effect of a pesticide on the photosynthetic processes of a plant. Can be desired or undesired.

Receiving Waters: The body of water to which a wastewater treatment plant or storm sewer discharges.

Restricted Entry Interval: The period between the application of a pesticide and the time when people can reenter the treated area without having to wear PPE. protective equipment.

Residual Pesticide: A pesticide which remains active for an extended period of time.

Residues: The amount of pesticide which remains on the target or other surfaces following treatment.

Restricted Use Pesticide: A pesticide which can only purchased by a certified pesticide applicator and used only by certified applicators or persons directly under their supervision. Not available to the general public because of high toxicities and/or environmental hazards.

Rodenticide: A pesticide used to kill or control rats, mice or other rodents.

Run-off: The movement of pesticides on soil surface by means of water.

Sanitary Sewer: A sewer designed to carry only residential or commercial waste. As opposed to a storm sewer.

Selective Pesticide: A pesticide which is toxic to some species, but not to others.

Sewer Section: The length of sewer pipe connecting two manholes.

Soil Fumigant: A pesticide that forms a vapor or gas in soil, used to control pests in soil such as weed seeds, nematodes, bacteria, viruses, fungi, etc.

Soil Sterilant: Similar to soil fumigant, except that it kills all living organisms in soil usually for an extended period of time.

Solution: A mixture of one or more pesticides with another substance, usually water, in which all materials are dissolved or in suspension. The preparation of pesticides with water.

Spot Treatment: A local application of a pesticide to only a small area.

Storm Sewer: A sewer designed to carry only rain water, ground water or surface water.

Surcharge: The condition that exists when the volume of water exceeds the hydraulic capacity of a sewer.

Surfactant: A type of adjuvant which improves the spreading and/or wetting qualities of a pesticides.

Suspension: A pesticide mixture in which fine particles, usually a solid, float or mix evenly in water or oil.

Swale: A dip or sag in a sewer pipe, in which water and debris often collects.

Synergism: The action of two or more pesticides or substances which yields a result greater than that which any one of the substances is capable of achieving individually.

Systemic Pesticide: A chemical that is absorbed and translocated within a animal or plant. Some systemic pesticides are designed to protect the plant or animal against pests or else they are designed to cause injury to the organism.

Target: The organism to which pesticides are applied.

Translocation: The movement of a pesticide through vascular plant tissue.

Trade Name: A brand name of a pesticide. The same active ingredient may be sold under different trade names. Example: "Vapam" is a trade name for metham.

Volatility: The tendency for a substance to turn from a solid or a liquid to a gas.

Water Table: The upper level of water saturated ground.

Weed: Any plant, that because it is in the wrong place at the wrong time, is deemed undesirable by man.

Wettable Powder: A pesticide formulation made by impregnating a powder with an active ingredient and wetting agent.